HP integrated VMware ESXi 3.5 Update 5

Getting Started Guide



Overview

Thank you for downloading HP integrated VMware ESXi 3.5 Update 5. HP has seamlessly integrated VMware ESXi, delivering active HP ProLiant management and consolidated lifecycle management for a consistent, reliable ProLiant experience.

HP Common Information Module (CIM) providers and integrated VMware ESXi provide active hardware management using HP Systems Insight Manager (SIM). These HP CIM providers proactively surface hardware monitoring data to deliver the most up-to-date server state information.

You can update integrated VMware ESXi using the standard VMware update tools. The integrated hypervisor installation is partitioned with redundant images, enabling a robust upgrade and recovery process.

The *HP integrated VMware ESXi 3.5 Update 5 Getting Started Guide* is provided for integrated ESXi 3.5 Standalone Edition or for HP integrated VMware ESXi VI3 Enterprise Edition. The accompanying ISO installs HP integrated VMware ESXi 3.5 Update 5.

If downloaded from HP, the installation ISO includes a trial license for the standalone edition. For more information, see the HP website (http://h20392.www2.hp.com/portal/swdepot/index.do). To obtain a permanent license for the standalone edition, see the VMware website (https://www.vmware.com/tryvmware/?p=esxi), and then register to obtain the serial number license.


The integrated ESXi Standalone edition is well suited for single server virtualization installations and is managed using the VMware free VI Client management console. HP Technical Software Support and Update Service is optional.

You can upgrade HP integrated VMware ESXi 3.5 Standalone edition to any of the fully licensed products for VMware vSphere, including Essentials, Essentials Plus, Standard, Advanced, Enterprise, and Enterprise Plus editions. For more information on support offered for HP VMware ESXi 3.5 Standalone edition and the other licensed products, see the HP website (http://www.hp.com/go/VMware/esxi).

HP VMware vSphere products include 1-year, 9x5 unlimited HP Technical Software Support and Update Service and are upgradeable to a 3-, 4-, or 5- year Technical Software Support and Update Service. You can downgrade VMware vSphere 4 licenses to ESXi 3.5 using the VMware license portal.

For more information about license delivery and about enabling enterprise entitlement, see "Enabling the standalone license (on page 7)" or "Enabling the enterprise entitlement (on page 7)."

Understanding the VMware infrastructure

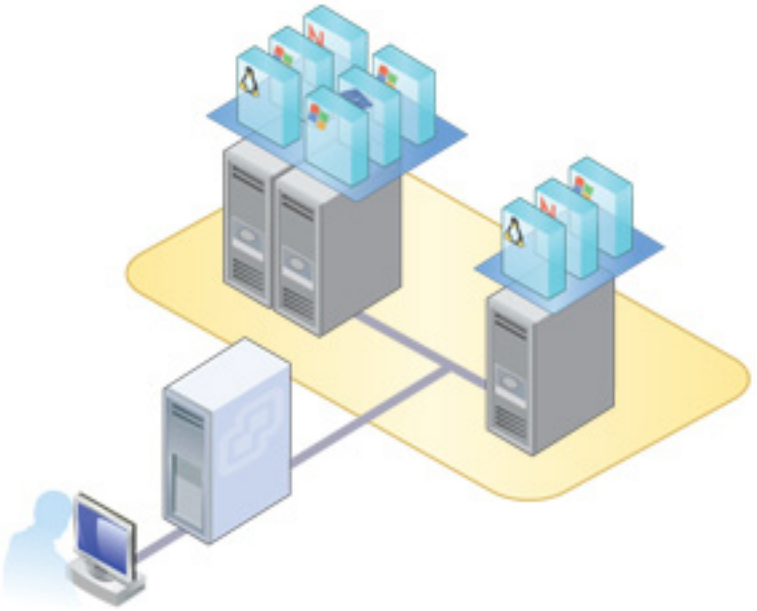

The following components comprise the VMware infrastructure:

- **Virtual machine**—A virtual machine is a software-based computer capable of running an operating system such as Microsoft® Windows® or GNU/Linux as if the operating system is installed on a physical machine.
- **Host**—A host is a physical machine running platform virtualization software such as ESXi. Hosts provide processor, memory, storage, and network resources for one or more virtual machines.
- **VirtualCenter Server**—VirtualCenter Server continuously monitors your virtual infrastructure, automates system administration tasks, and centralizes remote management sessions. It coordinates the resources and activities of individual hosts to efficiently distribute virtual machines and tolerate hardware downtime across a data center.
- **HP Insight Control for VMware vCenter Server**—The HP Insight Control extension for VMware vCenter Server delivers powerful HP server host management capabilities to virtualization administrators, enabling comprehensive monitoring, remote control, and power optimization directly from the vCenter console. For more information, see the HP website (http://www.hp.com/go/icvcenter).
- **VMware Infrastructure Client (VI Client)**—VI Client is the primary interface for interacting with hosts and virtual machines. VI Client can manage a standalone host by connecting directly to the host, or manage multiple hosts by connecting to a VirtualCenter Server machine.

- **Management network**—A management network enables the server administrator to manage discrete physical servers without relying on a general purpose communications network. This dedicated network enables a reliable connection to the hardware in the event of a failure in the general purpose network.
- **Virtual machine communication network**—A virtual machine communication network is built on the traditional, general purpose communication network. As with physical servers, virtual machine traffic is brokered through a general purpose network if the virtual machines are on discrete servers. Virtual machine communication on the same physical server is handled by a virtual switch within the server.
- **HP storage network**—A storage network enables virtual machines to access SAN devices similarly to physical servers. The medium for a storage network can be Fibre Channel or Ethernet. HP recommends HP StorageWorks SAN solutions.
- **Virtual SAN Appliance**—The HP StorageWorks Virtual SAN Software (VSA) provides another way to implement a virtual server high availability solution without the need for separate external shared-storage devices. For more information, see the HP website (http://www.hp.com/go/vsa).

Configuring an HP ProLiant server to use VMware ESXi

HP recommends upgrading to the latest ProLiant firmware revisions. For more information, see the server documentation.

VMware ESXi 3.5 only supports the following installation destinations:

- Any HP-supported hard drive
- Secure Digital (SD) memory card
- Flash media (USB flash drive)

For more information on supported flash devices, see the HP website (http://www.hp.com/go/VMware/esxi).

To configure a server using VMware ESXi:

1. Download the installation ISO from the HP website (http://h20392.www2.hp.com/portal/swdepot/index.do) or the VMware website (https://www.vmware.com/tryvmware/?p=esxi).
2. Burn the installation ISO to a CD, or move the ISO image to a location accessible using the virtual media capabilities of HP iLO 2 or iLO 3.

   NOTE: The CD is bootable. Boot the server and install the HP VMware ESXi product either to the hard drive or to flash media (USB flash drive or SD card). You must install the flash media into the internal port on the server.

3. Set up the server hardware, and if wanted, connect the server to the network.

4. If you install to flash media (USB flash drive or SD card), install the flash media into the internal port on the server.

   For instructions on accessing the internal flash media (USB flash drive or SD card) port, see the server documentation.

   For hardware requirements, see the server documentation.

5. Access the server console in one of the following ways:
   - Locally—Use a local keyboard and monitor.
   - Remotely—Use the iLO 2 or iLO 3 Integrated Remote Console remotely from a network client with a web browser.

     Remote setup requires the HP iLO 2 or iLO 3 Advanced Pack, which is sold separately for HP ProLiant ML and DL servers. The remote graphics capability is included with BL servers.

   IMPORTANT: After you boot up the server, you must press the correct function key when prompted to enter setup mode to configure boot order, configure hardware virtualization, and configure iLO 2 and iLO 3 and the Smart Array controller. Familiarize yourself with the following steps and prompts; each prompt is available for only a few seconds during the boot process.

   If you are installing to the hard drive, proceed to step 8.

6. To enable flash media (USB flash drive or SD card):
   a. Configure the flash device to boot before the hard drive. By default, flash media is configured to boot before the hard drive.
   b. Boot the server, and then press **F9** to enter ROM Based Setup Utility (RBSU).
   c. Scroll down to Standard Boot Order (IPL), and then press **Enter**.
   d. To modify the boot order, select the device you want to move, and then press **Enter**. A menu appears to change the device boot order.
   e. Ensure the flash media is set to boot before the hard drive.
7. Enable CPU virtualization.

   For CPU-specific virtualization capabilities, you can select **Intel® Virtualization Technology** or **AMD® Virtualization.** You must perform this step for supporting Windows® 64-bit operating systems and all guest 64-bit operating systems such as Linux.
   a. If you are not in RBSU, boot the server, and then press **F9** to enter RBSU.
   b. Scroll down to Advanced Options, and then press **Enter**.
   c. Scroll down to Processor Options, and then press **Enter**.
   d. Scroll down to the supported processor (either Intel® Virtualization Technology or AMD® Virtualization), and then press **Enter**.
   e. At the next screen, select **Enable**, and then press **Enter**.

f. Save the configuration changes, and then exit. The server reboots.

8. When prompted at POST, press **F8** to configure iLO 2 or iLO 3 network parameters, directory settings, global settings, and user accounts.

For more information, see the *HP Integrated Lights-Out 2 User Guide* or the *HP Integrated Lights-Out 3 User Guide*.

9. When prompted, press **F8** to create, view, or delete a logical drive for the Smart Array Controller using local storage.

For more information, see the *Configuring Arrays on HP Smart Array Controllers Reference Guide*.

Installing HP integrated VMware ESXi 3.5

To install the software image locally:

1. Place the installation CD into the CD-ROM drive, and then boot the server.

2. Follow the onscreen instructions to complete the installation.

To install the software image remotely using iLO 2 or iLO 3:

1. Verify that the server has the appropriate iLO license to use Virtual Media, open a web browser on your local machine, and then log in to iLO 2 or iLO 3.

HP Blade System c-Class server blades include a license for Virtual Media. For other servers, the HP iLO 2 or iLO 3 Advanced Pack license is required and is sold separately. For more information, contact an HP authorized reseller.

2. Select the **Virtual Media** tab, and then select the **Virtual Media Applet**.

3. Choose from one of the following options:

- Local Media Drive—Proceed to step 4.
- Local Image File—Proceed to step 5.

4. For the local media drive option:

a. Under the Virtual CD/DVD-ROM section, select **Local Media Drive**.

b. From the menu, select the drive letter of the physical CD/DVD-ROM drive on which the software image will be installed.

c. Click **Connect**. The connected drive icon turns green.

5. For the local image file option:

a. Under the Virtual CD/DVD-ROM section, select **Local Image File**.

b. Enter the path or file name of the image (ISO file) in the text box, or click **Browse** to locate the image file.

c. Click **Connect**. The connected drive icon turns green.

6. To complete the installation, follow the prompts generated by the installation CD.

If performing a restoration or recovery, when installation is complete, restore data from backup files.

7. To complete the VMware ESXi configuration, see the *Getting Started with ESXi Guide* on the HP website (http://h20392.www2.hp.com/portal/swdepot/index.do).
8. (Optional) To discover and manage this server, configure HP SIM.

   For more information about hosting and managing a VMware ESXi virtualization environment on ProLiant servers, see the HP website (http://www.hp.com/go/VMware).

   For more information about VMware and setting up a virtualized environment, see the VMware website (http://www.vmware.com/products/vi/esx/).

Enabling the standalone license

The installation ISO does not include a permanent license serial number. To obtain a permanent license serial number, register at the VMware website (https://www.vmware.com/tryvmware) and download the serial number. After you have received the serial number, use the VI Client to insert the license serial number.

Enabling the enterprise entitlement

If you purchase a license for VMware ESX/ESXi VI3 Enterprise Edition, follow the instructions included in your package to redeem and apply the license.

Updating VMware ESXi

Updates and patches for VMware ESXi are provided and delivered by VMware. These updates and patches include the latest ESXi software from VMware as well as updated CIM providers from HP.

The updates and patches are delivered and installed by VMware Update Manager (VUM). For more information on this process, see the VUM Administration Guide (http://www.vmware.com/pdf/vi3_vum_10_admin_guide.pdf).

Recovering from a system failure

If you encounter a system failure and need to re-install VMware ESXi, see "Installing HP integrated VMware ESXi 3.5 (on page 6)."



IMPORTANT: Using the installation CD completely erases all existing data and user configuration. All preconfigured settings, user data and license information is lost. After reinstalling the software you must reapply your licenses.

© Copyright 2008, 2010 Hewlett-Packard Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Confidential computer software. Valid license from HP required for possession, use or copying. Consistent with FAR 12.211 and 12.212, Commercial Computer Software, Computer Software Documentation, and Technical Data for Commercial Items are licensed to the U.S. Government under vendor's standard commercial license.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

Intel is a trademark or registered trademark of Intel Corporation in the U.S. and other countries.

AMD is a trademark of Advanced Micro Devices, Inc.
Part Number 469408-005
March 2010 (Fifth Edition)