

HPE Superdome Flex QuickSpecs


Superdome Flex: The Ultimate x86 based Mission-critical Platform

The HPE Superdome Flex Server is a compute breakthrough to power critical applications, accelerate data analytics and tackle AI and HPC workloads holistically. It delivers an unmatched combination of flexibility, performance and reliability for critical environments of any size. Its unique modular architecture and unparalleled scale allows you to start small and grow at your own pace. Leveraging its in-memory design and groundbreaking performance, you can process and analyze the growing amount of data moving through your business at extreme speed. With superior RAS and end-to-end security, the HPE Superdome Flex Server safeguards your vital workloads. The HPE Services portfolio, partner ecosystem, and HPE's mission-critical expertise complements the platform value to ensure your move to HPE Superdome Flex is a success.

Key features and benefits

HPE Superdome Flex offers an unmatched combination of flexibility, reliability and performance for critical environments of any size. In summary


- Support for 4 to 32-sockets of Intel Xeon Scalable processors in a single system with up to 28-cores per socket for a maximum of 896 cores
- 48 DIMM slots of DDR4 memory per chassis.
- 768Gb - 48TB of shared memory
- Choice of high performance DRAM only, or with 2nd Generation 62XX and 82XX processors, a combination of DRAM and HPE Persistent Memory available in 128, 256 and 512GB kits featuring Intel® Optane™ DC Persistent Memory to meet individual workload requirements. Superdome Flex supports only App-direct Mode on HPE Persistent Memory
- 16 half-height IO slots, or 8 full-height + 4 half-height IO slots, per four-socket chassis
- Base IO includes 4-drive bays, two 1GbE and two 10GbE NIC ports, four USB ports
- Built-in DVD
- Superdome Flex Analysis Engine for better diagnostics and mission-critical reliability.
- HPE nPARs: 4 socket to 16 socket and multiple nPARs configurations per rack supported for greater system reliability and licensing optimization

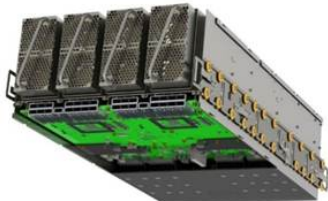

Chassis front and bottom




Chassis back and top

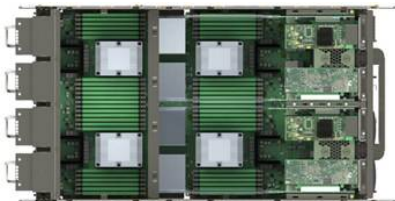


Chassis top view




Full Rack

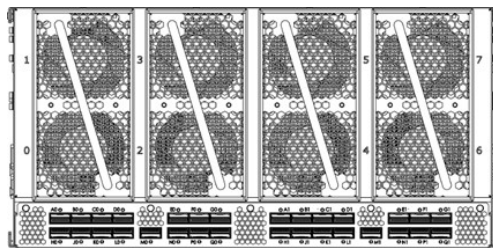

Chassis front view
8x Superdome Flex fans
30x Superdome Flex ports

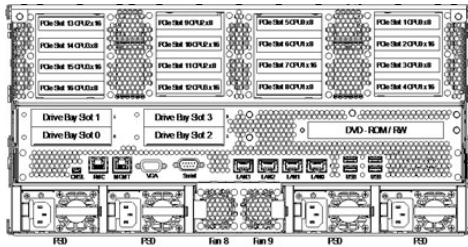

Base Chassis rear view (16-slot)
16x LP PCIe IO slots
4x HDD/SSD bays
1x DVD-R/DVD-RW bay
4x Ethernet ports
4x Power supplies
2x Superdome Flex ASIC fans

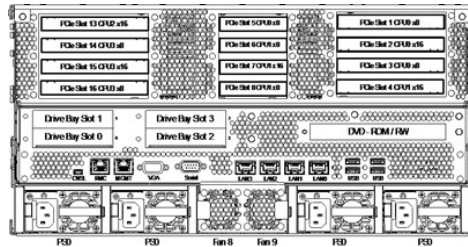

Base Chassis rear view (12-slot)
12x FH/LP PCIe IO slots
4x HDD/SSD bays
1x DVD-R/DVD-RW bay
4x Ethernet ports
4x Power supplies
2x Superdome Flex ASIC fans

General

The Superdome Flex system is built using 4-socket, 5U chassis that are cabled together to create systems from 4-sockets (1 chassis) to 32 sockets (8 chassis). Each chassis supports 8 fans, 4 power supplies (1600W each), associated power cords, and connecting Grid cables.

Power Supply (1600W)

80PLUS Titanium Power Supply		
Loading	100% maximum	50% of maximum
Minimum Efficiency	91%	96%
Rated Specifications	Value	Units
Input Voltage	100-127/200-240	Volts
Input Current	12/9.5	Amps
Input Frequency	47-63	Hz
Rated Output Power	1600	Watts

Notes:

- Absolute minimum efficiency at 50% of load = 96%
- System configuration defaults to a kit of that contains 4 power supplies.
- Optional 2130W Premium Power Supply is available

Power Supply (2130W) Optional

80PLUS Titanium Power Supply		
Loading	100% maximum	50% of maximum
Minimum Efficiency	91%	96%
Rated Specifications	Value	Units
Input Voltage	200-240	Volts
Input Current	13	Amps
Input Frequency	47-63	Hz
Rated Output Power	2130	Watts

System

The system can support up to eight (8) chassis.

Chassis

Each chassis has the following specifications:


- Support for four (4) Intel Xeon Scalable processors
- Supports 48 DDR4 DIMM slots (12 DIMMs per processor)
- Supports up to 16 PCIe Gen 3 slots
- Supports additional IO capability in a Base IO chassis

Base and expansion chassis


Every Superdome Flex system starts with one 4-socket Base Chassis (with boot support). Up to seven (7) Expansion/Partition Chassis can be added to expand the system from 4-sockets to 32-sockets.

I/O slots

Chassis support either 16 half-height PCIe slots (7 x16 slots and 9 x8 slots); 12 slots with eight-full height slots (4 x16 slots and 4 x8 slots) + 4 half-height slots (1 x16 slot and 3 x8 slots); or a compute-only configuration (no PCIe slots). The compute-only configuration is only supported with the Expansion Chassis.

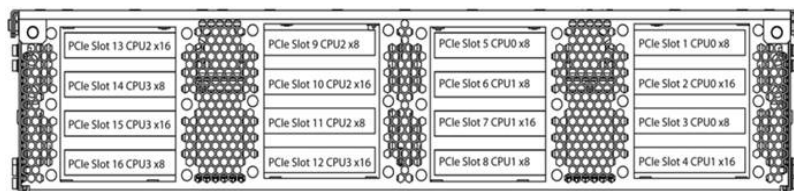

16-slot configuration

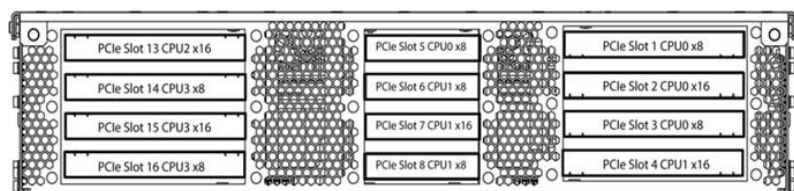


12-slot configuration

Base I/O


Base Chassis

The Base IO includes the board management controller (BMC), a DVD bay, four drives bays, two 10GbE + two 1GbE NIC ports, serial console, VGA and four USB ports. A Management LAN port and 1GbE Rack management controller port is also included. The 2 x 10GbE ports will clock down to 1GbE if needed.

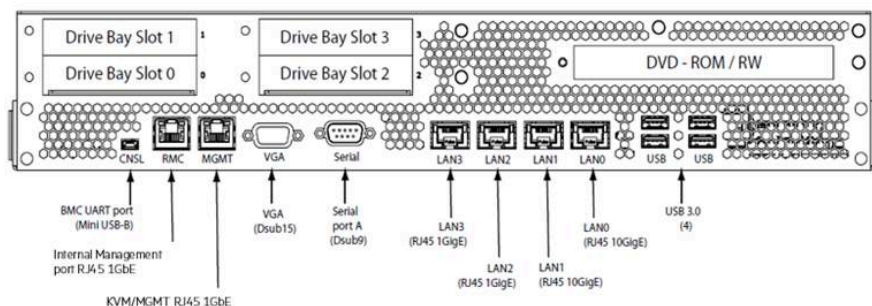

Expansion Chassis

The Base IO includes the board management controller (BMC), a Management LAN port, and 1GbE Rack management controller port.

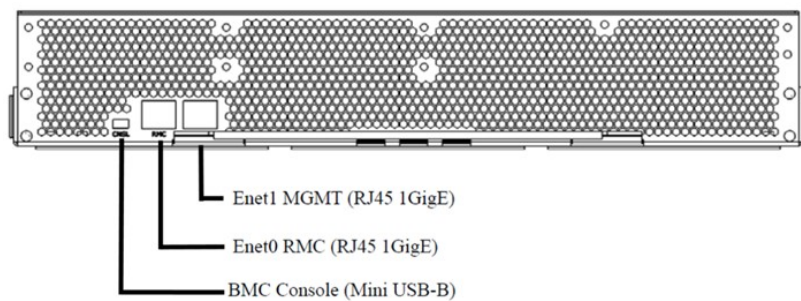

I/O Options

- 1Gb, 10Gb, 25Gb NIC, 16Gb/32Gb FC Internal and External SAS controllers
- InfiniBand EDR/Ethernet 100Gb; Infiniband HDR
- IO Accelerators
- GPU Options

Standard Features

Processors

Each server chassis supports 82XX or 62XX Intel® Xeon® Scalable processors:

- Intel Xeon-Gold 6226 (2.7GHz/12-core/125W) Processor Kit
- Intel Xeon-Gold 6230 (2.1GHz/20-core/150W) Processor Kit
- Intel Xeon-Gold 6240 (2.6GHz/18-core/150W) Processor Kit
- Intel Xeon-Gold 6240L (2.6GHz/18-core/150W) Processor Kit
- Intel Xeon-Gold 6242 (2.8GHz/16-core/150W) Processor Kit
- Intel Xeon-Gold 6244 (3.6GHz/8-core/150W) Processor Kit
- Intel Xeon-Gold 6246 (3.3GHz/12-core/165W) Processor Kit
- Intel Xeon-Gold 6248 (2.6GHz/20-core/150W) Processor Kit
- Intel Xeon-Gold 6252 (2.1GHz/24-core/150W) Processor Kit
- Intel Xeon-Gold 6254 (3.1GHz/18-core/200W) Processor Kit
- Intel Xeon-Platinum 8253 (2.2GHz/16-core/125W) Processor Kit
- Intel Xeon-Platinum 8256 (3.8GHz/4-core/105W) Processor Kit
- Intel Xeon-Platinum 8260 (2.4GHz/24-core/165W) Processor Kit
- Intel Xeon-Platinum 8260L (2.4GHz/24-core/165W) Processor Kit
- Intel Xeon-Platinum 8268 (2.9GHz/24-core/205W) Processor Kit
- Intel Xeon-Platinum 8270 (2.7GHz/26-core/205W) Processor Kit
- Intel Xeon-Platinum 8276 (2.2GHz/28-core/165W) Processor Kit
- Intel Xeon-Platinum 8276L (2.2GHz/28-core/165W) Processor Kit
- Intel Xeon-Platinum 8280 (2.7GHz/28-core/205W) Processor Kit
- Intel Xeon-Platinum 8280L (2.7GHz/28-core/205W) Processor Kit

Notes:

- All processors can be used to scale to 32 sockets
- All processors must be identical within a partition, system and chassis. No mixing is allowed between Intel Xeon® Scalable processor families

Chipset

HPE Superdome Flex ASIC

Upgradability and scalability

Scalable from 4-socket configurations to 32-socket configurations in 4-socket increments

Memory type Registered

For Intel Xeon® Scalable 62XX and 82XX processor family:

- 32GB (1x32GB) Dual Rank x4 DDR4-2933 Registered Memory Kit
- 64GB (1x64GB) Quad Rank x4 DDR4-2933 Load Reduced Memory Kit
- 128GB (1x128GB) Quad Rank x4 DDR4-2933 Load Reduced Memory Kit

Memory protection

Error checking and correcting (ECC) on memory and caches; ADDDC is supported.
Fast Fault Tolerance (custom enhanced ADDDC)

Operating System

- Red Hat Enterprise Linux (RHEL) including KVM support
- SUSE Linux Enterprise Server (SLES) including KVM support
- Oracle Linux/Oracle UEK
- Oracle VM
- VMware
- Microsoft Windows Server 2016 Standard and Datacenter includes Hyper-V support
- Microsoft Windows Server 2019 Standard and Datacenter (for 62XX and 82XX processors) includes Hyper-V support
- Microsoft Windows Server 2022 Standard and Datacenter (for 62XX and 82XX processors) includes Hyper-V support
- Microsoft Windows Server 2025 Standard and Datacenter (for 62XX and 82XX processors) includes Hyper-V support

Notes:

- HPE Foundation Software is required for all Linux O/S environments
- SLES, RHEL, and Oracle Linux certifications include KVM certification
- Minimum OS levels may be required for certain features and hardware options
- HPE Superdome Flex I/O VMware Support: I/O configurations with VMware must adhere to the "vSphere Configuration Maximums" as documented by VMware per controller type and manufacturer.
- For more information on the HPE Certified and Supported Hewlett Packard Enterprise servers for OS and Virtualization Software and latest listing of software drivers available for your server, please visit our Support Matrix at: <http://www.hpe.com/info/ossupport>

For I/O support by Operating System see below table:

Product SKU	Description	Win dows 2019	Win dows 2022	Win dows 2025	RHEL 8	RHEL 9	RHEL 10	SLES 12	SLES 15/16	VM Ware	Oracle/ UEK	Oracle OVM
P06250-H21	HPE InfiniBand HDR100/Ethernet 100Gb 1-port QSFP56 PCIe3 x16 MCX653105A-ECAT Adapter	-	E	E	X	X	X	X	X	-	-	-
P06251-H21	HPE InfiniBand HDR100/Ethernet 100Gb 2-port QSFP56 PCIe3 x16 MCX653106A-ECAT Adapter	-	E	E	X	X	X	X	X	-	-	-
829335-B21	HPE 100Gb 1-port OP101 QSFP28 x16 PCIe Gen3 with Intel Omni-Path Architecture Adapter	-	-	-	X	X	X	X	X	-	-	-
P26262-B21	Broadcom BCM57414 Ethernet 10/25Gb 2-port SFP28 Adapter for HPE	X	X	X	X	X	X	X	X	X	X	X
874253-B21	HPE Ethernet 100Gb 1-port QSFP28 MCX515A-CCAT Adapter	X	X	X	X	X	X	X	X	X	-	-
P9D94A	HPE SN1100Q 16Gb Dual Port Fibre Channel Host Bus Adapter	X	X	X	X	X	X	X	X	X	X	X
Q0L14A	HPE SN1200E 16Gb Dual Port Fibre Channel Host Bus Adapter	X	X	X	X	X	X	X	X	X	X	X
Q0L12A	HPE SN1600E 32Gb Dual Port Fibre Channel Host Bus Adapter	X	X	X	X	X	X	X	X	X	X	X
R2J63A	HPE SN1610E 32Gb 2-port Fibre Channel Host Bus Adapter	X	X	X	X	X	X	X	X	X	X	X
R7N77A	HPE SN1700E 64Gb 1-port Fibre Channel Host Bus Adapter	X	X	X	X	X	X	X	X	X	X	X
R7N86A	HPE SN1700Q 64Gb 1-port Fibre Channel Host Bus Adapter	X	X	X	X	X	X	X	X	X	X	X
R2E09A	HPE SN1610Q 32Gb 2-port Fibre Channel Host Bus Adapter	X	X	X	X	X	X	X	X	X	X	X
Q2N11A	HPE Superdome Flex 9361-4i Internal RAID Controller	X	X	X	X	X	X	X	X	X	X	X
Q6M15A	HPE 3154-8e 8-port External RAID Controller	X	X	X	X	X	X	X	X	X	X	X
R0Y99A	HPE 3162-8i Encryption Option 8-port RAID Controller	X	X	X	X	X	X	X	X	X	X	X
S0K90C	NVIDIA L40 48GB PCIe Accelerator for HPE	-	X	-	-	X	X	-	X	-	-	-
S0K89C	NVIDIA L4 24GB PCIe Accelerator for HPE	-	X	-	-	X	X	-	X	X	-	-
S2D86C	NVIDIA H100 NVL 94GB PCIe Accelerator for HPE	-	X	-	-	X	X	-	X	X	-	-

Notes:

– X = Supported

– E = Ethernet Mode Only

– Minimum OS levels are required for support of some processors and options

– HPE Superdome Flex I/O Oracle Linux Support: Hewlett Packard Enterprise only supports the use of in distribution drivers with Oracle Linux, Oracle VM and UEK update releases. All controllers tested above used the driver located on the source media for their respective Oracle product. Out of distribution drivers are not supported with Oracle Linux, Oracle VM or UEK.

Partitioning

Multiple 4, 8, 12 or 16-socket electrically isolated HPE nPartitions (HPE nPars) supported per rack. Please refer to the table below for HPE nPars Partition Options.

All Processors and Memory must be the same within a Partition.

DVD is required per Base Chassis and per Partition Expansion Chassis

Repartitioning does not require recabling

Solution ID	48 partitioning combinations				
1 Chassis (4s)					
1	4s				
2 Chassis (8s)					
2	4s	4s			
3	8s				
3 Chassis (12s)					
4	4s	4s	4s		
5	8s	4s			
6	12s				
4 Chassis (16s)					
7	4s	4s	4s	4s	
8	8s	4s		4s	
9	8s	8s			
10	12s			4s	
11	16s				
5 Chassis (20s)					
12	4s	4s	4s	4s	
13	8s	4s		4s	
14	8s	8s		4s	
15	12s			4s	
16	16s			4s	
6 Chassis (24s)					

17	4s	4s	4s	4s	4s	4s	
18	8s		4s	4s	4s		
19	8s		8s		4s		
20	8s		8s		8s		
21	12s			4s	4s	4s	
22	12s			4s	8s		
23	16s				4s	4s	
24	16s				8s		
7 Chassis (28s)							
25	4s	4s	4s	4s	4s	4s	4s
26	8s		4s	4s	4s	4s	
27	8s		8s		4s	4s	
28	8s		8s		8s		4s
29	12s			4s	4s	4s	4s
30	12s			4s	8s		4s
31	12s			4s	12s		
32	16s				4s	4s	4s
33	16s				8s		4s
34	16s				12s		
8 Chassis (32s)							
35	4s	4s	4s	4s	4s	4s	4s
36	8s		4s	4s	4s	4s	4s
37	8s		8s		4s	4s	4s
38	8s		8s		8s		4s
39	8s		8s		8s		8s
40	12s			4s	4s	4s	4s
41	12s			4s	8s		4s
42	12s			4s	8s	8s	
43	12s			4s	12s		4s

Solution ID	48 partitioning combinations									
1 Chassis (4s)										
1	4s									
2 Chassis (8s)										
2	4s	4s								
3	8s									
3 Chassis (12s)										
4	4s	4s	4s							
5	8s			4s						
6	12s									
4 Chassis (16s)										
7	4s	4s	4s	4s						
8	8s			4s	4s					
9	8s			8s						
10	12s				4s					
11	16s									
5 Chassis (20s)										
12	4s	4s	4s	4s	4s					
13	8s			4s	4s	4s				
14	8s			8s	4s					
15	12s				4s	4s				
16	16s					4s				
6 Chassis (24s)										
17	4s	4s	4s	4s	4s	4s				
18	8s			4s	4s	4s				
19	8s			8s	4s	4s				
20	8s			8s	8s					
21	12s				4s	4s	4s			
22	12s				4s	8s				
23	16s					4s	4s			
24	16s					8s				
7 Chassis (28s)										
25	4s	4s	4s	4s	4s	4s	4s	4s		
26	8s			4s	4s	4s	4s			
27	8s			8s	4s	4s	4s			
28	8s			8s	8s	4s				
29	12s				4s	4s	4s			
30	12s				4s	8s	4s			
31	12s				4s	12s				
32	16s					4s	4s	4s		
33	16s					8s	4s			
34	16s					12s				
8 Chassis (32s)										
35	4s	4s	4s	4s	4s	4s	4s	4s	4s	
36	8s			4s	4s	4s	4s	4s		
37	8s			8s	4s	4s	4s	4s		
38	8s			8s	8s	4s	4s			
39	8s			8s	8s	8s				
40	12s				4s	4s	4s	4s	4s	

41	12s			4s		8s		4s		4s
42	12s			4s		8s		8s		
43	12s			4s		12s				4s
Solution ID 48 partitioning combinations										
1 Chassis (4s)										
1	4s									
2 Chassis (8s)										
2	4s	4s								
3	8s									
3 Chassis (12s)										
4	4s	4s	4s							
5	8s		4s							
6	12s									
4 Chassis (16s)										
7	4s	4s	4s	4s						
8	8s		4s	4s						
9	8s		8s							
10	12s			4s						
11	16s									
5 Chassis (20s)										
12	4s	4s	4s	4s	4s					
13	8s		4s	4s	4s					
14	8s		8s		4s					
15	12s			4s	4s					
16	16s				4s					
6 Chassis (24s)										
17	4s	4s	4s	4s	4s	4s	4s			
18	8s		4s	4s	4s	4s	4s			
19	8s		8s		4s	4s				
20	8s		8s		8s					
21	12s			4s	4s	4s				
22	12s			4s	8s					
23	16s				4s	4s				
24	16s				8s					
7 Chassis (28s)										
25	4s	4s	4s	4s	4s	4s	4s	4s		
26	8s		4s	4s	4s	4s	4s	4s		
27	8s		8s		4s	4s	4s			
28	8s		8s		8s		4s			
29	12s			4s	4s	4s	4s			
30	12s			4s	8s		4s			
31	12s			4s	12s					
32	16s				4s	4s	4s			
33	16s				8s		4s			
34	16s				12s					
8 Chassis (32s)										
35	4s	4s	4s	4s	4s	4s	4s	4s	4s	
36	8s		4s	4s		4s	4s	4s	4s	
37	8s		8s			4s	4s	4s	4s	
38	8s		8s			8s		4s	4s	
39	8s		8s			8s		8s		
40	12s			4s		4s	4s	4s	4s	
41	12s			4s		8s		4s	4s	
42	12s			4s		8s		8s		
43	12s			4s		12s			4s	

- Notes:
- No partitions over 16-sockets
 - No partitions to span bottom half and top half of rack

Form Factor

- 5U Base Chassis or Expansion Chassis
- 1U external Rack Management Controller (RMC)

- Notes:
- An embedded RMC (eRMC) option is available for 4s and 8s systems which means the 1U RMC is not required when the embedded RMC is used. It is recommended to configure 4s or 8s systems with the 1U external RMC if customers might scale to greater than 8s at a later date.
 - The 1U RMC is required for Partitioned systems regardless of socket count

High availability-standard server features

2N (N+N) redundant (1600W) power supplies reduced to N+1 when GPUs are included

Notes: When using the 2130W Premium power supply N+N with GPU is available

- N+1 fans (or greater depending on the load)
- Hot-Swappable and redundant fans, power supplies
- Fault Tolerant Fabric built on dynamic multi-pathing and end-to-end retry technology
- Enhanced MCA Gen2 recovery
- ADDDC memory options
- SATA RAID 5 support
- ECC, re-tries, and Link Width Reduction on data paths
- Automatic de-configuration of DIMMs. Processor de-configuration in subsequent releases
- I/O Advanced Error Recovery, and Live Error Recovery
- Redundant network paths
- Redundant Fibre Channel paths

For complete RAS Feature discussion:

<https://www.hpe.com/psnow/doc/a50003250enw>

Standard Warranty

Three-year parts, 3 Year Labor and 3 Year on-site limited global warranty.

Protected by HPE Services operational services and a worldwide network of Hewlett Packard Enterprise Authorized Channel Partners.

Hewlett Packard Enterprise branded hardware and options qualified for the HPE Superdome Flex Server are covered by a global limited warranty and supported by HPE Services and a worldwide network of HPE Authorized Channel Partners. The HPE branded hardware and options diagnostic support and repair is available for three years from date of purchase, or the warranty length of the server they are attached to, whichever is greater. Additional support may be covered under the warranty or available through additional support packages. Enhancements to warranty services are available through HPE Services operational services or customized service agreements.

Additional information regarding worldwide limited warranty and technical support is available at:

<https://support.hpe.com/hpsc/doc/public/display?docId=c01865770>

Physical and Environmental Information

Systems are comprised of the following components: Base chassis plus Expansion/Partition chassis.

Enclosure

The system can be field racked. However, it is strongly recommended that customers order the systems racked from the factory. This provides the customer the benefit of extensive system testing and avoids possible premium service charges for field racking service. Field racking requires the use of an appropriate material lift capable of lifting 80+ lbs.

Systems are supported in the HPE 600mm wide and 800mm wide racks, and the HPE D-rack. Rack availability is dependent on size of system complex.

Other products may be placed in the same rack as the system. Placement of these other products must not result in moving the server chassis.

All racks in the same order must be the same height and width.

Hardware Configuration	
Number of chassis (min/max) per compute system	1/8
Number of processor modules per compute system (min/max)	4/32
Number of DIMMs (increments of 24 DIMMs per chassis - min/max)	24 or 48 per chassis
Number of Grid cables (non-partitioned)	22 (2-chassis)/112 (8-chassis)
Number of I/O slots	16 half-height per chassis Or 8 full-height and 4 half-height per chassis Or Compute only 0-slot (Expansion Chassis only)
Number of RMCs	0/1
Number of Base IO	1
SAS/SATA drives per Base IO	Up to 4
DVD module per Base IO	1
Fans	8 per chassis
Power Supplies (1600W)	2N: 4 per chassis - this is a separate sku(s)

- The system is supported in the HPE 600mm and 800mm series racks and the HPE D-rack with a standard rack door.
- Each chassis is populated with two Flex ASICs.
- General rules are as follows:
- Boot devices should be in slot 5
- Alternate boot devices should be in slot 3

Configuration Rules

The chassis is the basic building block.

A single system can be supported in 1-Chassis to 8-Chassis configurations. Two options exist for management - an embedded Rack Management Controller (eRMC) or an external Rack Management Controller (RMC). The eRMC is not expandable beyond two chassis. When nPars is required the RMC is also always required regardless of the number of chassis in the complex.

Each system starts with one (1) Base Chassis. Up to seven (7) Expansion Chassis can be added to scale the system.

All chassis are populated with four processor module - same processors within chassis.

A system can have one to eight chassis and one external RMC (optional for 1 and 2 chassis configurations except for partitioned systems)

There are single phase and three phase power distribution options.

Notes: All processors within a system must be of the same processor family (i.e. 61XX, 81XX, 62XX OR 82XX). No mixing is allowed

Racking Choices

Superdome Flex can be racked in many of the HPE G2 Enterprise Series and Advanced Series racks, and the HPE D-Rack. If the Superdome Flex will be configured as 16-sockets (4-chassis) or more the HPE 800mm wide racks or D-Rack are required. Complete ordering rules can be found in the Superdome Flex server menu and in the ordering & configuration tools.

The Superdome Flex can also be rack mounted in 3rd party rack. Specific rules and guidelines for this are available here:

https://support.hpe.com/hpsc/doc/public/display?docId=emr_na-a00043156en_us&docLocale=en_US

The following racks are supported with Superdome Flex-refer to the server menu for ordering & configuration rules.

- HPE 22U 600x1075mm Adv G2 Shk Rack
- HPE 36U 600x1075mm Adv G2 Kit Shock Rack
- HPE 42U 600x1200mm Adv G2 Kit Shock Rack
- HPE 42U 600x1075mm Adv G2 Kit Shk Rack
- HPE 42U 600x1075 Ent G2 Shock Rack
- HPE 42U 600x1200 Ent G2 Shock Rack
- HPE 42U 800x1075 Ent G2 Shock Rack
- HPE 42U 800x1200 Ent G2 Shock Rack
- HPE 48U 600x1075 Ent G2 Shock Rack
- HPE 48U 600x1200 Ent G2 Shock Rack
- HPE 48U 800x1075 Ent G2 Shock Rack
- HPE 48U 800x1200 Ent G2 Shock Rack
- HPE 42U 610mm x 1156mm D-Rack
- HPE D-Rack 42U 610mm x 1156mm Extended

The default assumption is that chassis are loaded in the rack at the bottom. It is recommended that 1U is left below the bottom of the compute enclosure in the 42U rack to provide PDU and cabling exit space.

Supported configurations have the system located at the bottom of the rack with peripherals located above all chassis

HPE G2 Enterprise Series Racks QuickSpecs: <https://www.hpe.com/h20195/v2/GetDocument.aspx?docname=a00002907enw>

HPE G2 Advanced Series Racks QuickSpecs: <https://www.hpe.com/h20195/v2/GetDocument.aspx?docname=c05324689>

PDU Model	Region	Power Phase	Input Voltage Range	Input Current	Circuit Breakers	Input Plug Type	Input Cord Length	Outlet	Dimensions
H7C28A	NA/JP	Three	200 - 240V	48A derated	9 x 20A	IEC 60309/460P9W	12'	21 x IEC320 C13	32.5"H x 2.5"W x 6.25"D
H7C29A	INTL	Three	380 - 420V	32A	9 x 20A	IEC 60309/532C6W	12'	21 x IEC320 C13	32.5"H x 2.5"W x 6.25"D
H7C30A	NA/JP	Single	200 - 240V	24A derated	2 x 20A	NEMA L6-30	12'	8 x IEC320 C13	15"H x 1.75"W x 2.5"D
H7C31A	INTL	Single	200 - 240V	32A	2 x 20A	IEC 60309/332C6W	12'	8 x IEC320 C13	15"H x 1.75"W x 2.5"D
H7C32A	AUS	Single	200 - 240V	32A	2 x 20A	56PA332	12'	8 x IEC320 C13	15"H x 1.75"W x 2.5"D

HPE D-Rack

The HPE D-Rack is available for Superdome Flex in two models:

- HPE 42U 610mm x 1156mm D-Rack (H7C27A)
- HPE D-Rack 42U 610mm x 1156mm Extended (Q2T97A) The extended rack includes a 2U extension for a total of 44 rack units (44U)

The following PDUs are supported with the HPE D-Rack

- HPE D-Rack 21 x 3-Phase 240V NA/JP PDU (H7C28A) Order 2 PDUs for 1-4 SD Flex chassis in rack; Order 4 PDUs for 5-8 SD Flex chassis in rack
- HPE D-Rack 21 x 3-Phase 400V INTL PDU (H7C29A) Order 2 PDUs for 1-4 SD Flex chassis in rack; Order 4 PDUs for 5-8 SD Flex chassis in rack
- HPE D-Rack 8 x Single-Phase 240V NA PDU (H7C30A) Order 2 PDUs per chassis for 1-4 SD Flex chassis in rack; Order 1 PDU per chassis for 5-8 SD Flex chassis in rack
- HPE D-Rack 8 x Single-Phase 240V INTL PDU (H7C31A) Order 2 PDUs per chassis for 1-4 SD Flex chassis in rack; Order 1 PDU per chassis for 5-8 SD Flex chassis in rack
- HPE D-Rack 8 x Single-Phase 240V AU PDU (H7C32A) Order 2 PDUs per chassis for 1-4 SD Flex chassis in rack; Order 1 PDU per chassis for 5-8 SD Flex chassis in rack
- HPE G2 Basic 3Ph 8.6kVA/5-20R NA/JP PDU (P9Q55A), configuration specific rules apply
- HPE G2 Basic Mdlr 3Ph 17.3kVA/NA/JP PDU (P9Q60A), configuration specific rules apply

- HPE G2 Basic Mdlr 3Ph 22kVA/C19 INTL PDU (P9Q63A), configuration specific rules apply
 - HPE G2 Basic Mdlr 14.4kVA/C19 INTL PDU (P9Q51A), configuration specific rules apply
- Notes: Single Phase solution with more than 4 chassis are non-redundant PDU solutions (1 PDU per chassis)

Single 24-inch wide 42U rack	
Dimensions	Height: 78.75 in. (200 cm)
	Width: 24.0 in. (60.9 cm)
	Depth: 46.0 in. (116.8 cm)
Shipping dimensions	Height: 88.88 in. (225.8 cm)
	Width: 44.0 in. (111.8 cm)
	Depth: 62.75 in. (159.4 cm)
Weight (single rack)	386 lb. (175.1 kg)
Shipping weight (single rack)	856 lb. (388.3 kg)
Static load (max)	2400 lb. (1088.6 kg)
Dynamic load (max rolling)	2500 lb. (1134kg)
42U rack access requirements:	Front: 48 in. (121.9 cm)
	Rear: 48 in. (121.9 cm)
	Top: 18 in. (45.7 cm)

HPE Power Advisor

The HPE Power Advisor is a tool provided by Hewlett-Packard to assist in the estimation of power consumption at a system, rack, and multi-rack level.

Available at: <https://poweradvisorext.it.hpe.com>

Processor Support

Superdome Flex systems support Intel® Xeon®-2nd Generation 82XX and 62XX processors as specified in the following table.

Notes: Minimum OS levels are required for support of some processors and options

Support for the various speed bins is as follows:

Supported Processor Matrix

Intel® Xeon® Scalable Processor Family 2 nd Generation 62XX and 82XX				
Processor	# of cores per processor	Frequency	Cache	Power
Intel® Xeon® Platinum 8280 Processor	28c	2.7 GHz	38.5 MB	205W
Intel® Xeon® Platinum 8280L Processor	28c	2.7 GHz	38.5 MB	205W
Intel® Xeon® Platinum 8276 Processor	28c	2.2 GHz	38.5 MB	165W
Intel® Xeon® Platinum 8276L Processor	28c	2.2 GHz	38.5 MB	165W
Intel® Xeon® Platinum 8270 Processor	26c	2.7 GHz	35.75 MB	205W
Intel® Xeon® Platinum 8268 Processor	24c	2.8 GHz	35.75 MB	205W
Intel® Xeon® Platinum 8260 Processor	24c	2.4 GHz	35.75 MB	165W
Intel® Xeon® Platinum 8260L Processor	24c	2.4 GHz	35.75 MB	165W
Intel® Xeon® Platinum 8256 Processor	4c	3.8 GHz	16.5 MB	105W
Intel® Xeon® Platinum 8253 Processor	16c	2.2 GHz	22. MB	125W
Intel® Xeon® Gold 6254 Processor	18c	3.1 GHz	24.75 MB	200W
Intel® Xeon® Gold 6252 Processor	24c	2.1 GHz	35.75 MB	150W
Intel® Xeon® Gold 6248 Processor	20c	2.6 GHz	27.5 MB	150W
Intel® Xeon® Gold 6246 Processor	12c	3.3 GHz	24.75 MB	165W
Intel® Xeon® Gold 6244 Processor	8c	3.6 GHz	24.75 MB	150W
Intel® Xeon® Gold 6242 Processor	16c	2.8 GHz	22 MB	150W
Intel® Xeon® Gold 6240 Processor	18c	2.6 GHz	24.75 MB	150W
Intel® Xeon® Gold 6240L Processor	18c	2.6 GHz	24.75 MB	150W
Intel® Xeon® Gold 6230 Processor	20c	2.1 GHz	27.5 MB	150W
Intel® Xeon® Gold 6226 Processor	12c	2.7 GHz	19.25 MB	125W

Processor Mixing Support

Governing rules for mixing processors are as follows:

- No mixing of processor types within the same chassis or HPE nPar
 - No support for processors running at different frequencies or different cache sizes within the same chassis or HPE nPar
 - Processor modules on a chassis must be the same revision, frequency, & cache size
- Notes: It is highly recommended that all processors within all nPars within a complex be identical in order to maximize repartitioning options

DDR4 Memory Support

Systems will use DDR4 DIMM technology.

The following DIMMs are supported in the chassis for systems with 62XX and 82XX processors:

- 32GB (1x32GB) Dual Rank x4 DDR4-2933 Registered Memory Kit
- 64GB (1x64GB) Quad Rank x4 DDR4-2933 Load Reduced Memory Kit
- 128GB (1x128GB) Quad Rank x4 DDR4-2933 Load Reduced Memory Kit

Only DIMMs that Hewlett Packard Enterprise has qualified are supported.

Each chassis supports up to 48 DIMMs. This breaks down to twelve DIMMs per socket.

General memory configuration rules:

- For best performance, the amount of memory on each chassis within the partition should be the same.
- Use the same amount of memory on each processor module within a partition.
- Either a full chassis of 48 DIMMs or a half populated chassis with 24 DIMMs is supported.

Persistent Memory Support

HPE Persistent Memory support is available only on systems that have Intel Xeon 2nd Generation 62XX and 82XX processors

The following HPE Persistent Memory DIMMs are supported::

- HPE 128GB 2666 Persistent Memory Kit featuring Intel® Optane™ DC persistent memory
- HPE 256GB 2666 Persistent Memory Kit featuring Intel® Optane™ DC persistent memory
- HPE 512GB 2666 Persistent Memory Kit featuring Intel® Optane™ DC persistent memory

Notes:

- Chassis must be ½ populated with DDR4 DIMMs before HPE Persistent Memory can be added
- No mixing of DDR4 memory sizes is supported when HPE Persistent Memory is utilized
- HPE Persistent Memory quantity and type must be consistent across system complex or partitions. If partitions have different memory configurations, repartitioning is not supported
- HPE Persistent Memory DIMMS must be equally populated across each socket as either 1, 2 or 6 per socket.
- HPE Persistent Memory may only be used in a system/complex of 16 sockets or less.
- OS Supported: RedHat, SUSE, Oracle Linux, Windows 2019 and VMware. Minimum OS levels are required for support of HPE Persistent Memory
- Superdome Flex supports only App-direct Mode with HPE Persistent Memory

Superdome Flex Storage Support

For HPE Storage solutions, please see:

<https://www.hpe.com/storage/spock>

Networking

- HPE Ethernet 10/25Gb 2-port SFP28 MCX4121A-ACUT Adapter (requires transceivers or DAC)
- HPE Ethernet 10Gb 2-port BASE-T X550-AT2 Adapter
- HPE Ethernet 10Gb 2-port SFP+ X710-DA2 Adapter (requires transceivers or DAC)
- HPE Ethernet 1Gb 4-port BASE-T BCM5719 Adapter
- HPE Ethernet 1Gb 2-port BASE-T I350-T2V2 Adapter
- HPE Ethernet 10/25Gb 2-port SFP28 BCM57414 Adapter
- HPE Ethernet 100Gb 1-port QSFP28 MCX515A-CCAT Adapter (requires transceivers or DAC)
- HPE Ethernet 10/25Gb 2-port SFP28 QL41401-A2G Adapter (requires transceivers or DAC)

Notes: Server networking transceiver and cable compatibility matrix can be found [here](#)

Storage and boot support

- HPE SN1100Q 16Gb Dual Port Fibre Channel Host Bus Adapter
- HPE SN1200E 16Gb Dual Port Fibre Channel Host Bus Adapter
- HPE SN1600E 32Gb Dual Port Fibre Channel Host Bus Adapter
- HPE SN1600Q 32Gb Dual Port Fibre Channel Host Bus Adapter
- HPE SN1610E 32Gb Dual Port Fibre Channel Host Bus Adapter
- HPE SN1610Q 32Gb Dual Port Fibre Channel Host Bus Adapter
- HPE SN1700E 64Gb 1-port Fibre Channel Host Bus Adapter
- HPE SN1700Q 64Gb 1-port Fibre Channel Host Bus Adapter
- HPE 9361-4i RAID Controller (internal)
- HPE 3154-8e RAID Controller (external)
- HPE 3162-8i Encryption RAID Cntlr (internal encryption)

RAID Options

Embedded Base IO

The Base IO includes the embedded Intel RSTe SATA controller with 6Gb SATA support for two (2) or four (4) 2.5" SATA solid state drives (SSDs). The RSTe SATA controller is directly connected to the internal drive carriers located in the rear of the Superdome Flex Base Chassis.

The internal drive backplane can support either SAS or SATAHDDs/SSDs when connected to the optional HPE 9361-4i RAID controller or HPE 3162-8i encryption RAID controller. Storage options are limited to only SATA HDDs/SSDs when connected to the embedded Intel RSTe SATA controller.

The drives can be used as physical disks (HBA mode) or can be configured as RAID 0, 1, 10, 5 using SW RAID; RAID 1 is the default setting from the factory. Boot support is available for both physical/HBA mode and RAID mode. The internal SATA BIOS assisted RAID mirroring is not supported with VMware.

Embedded Intel RSTe SATA Controller

The drives can be used as physical disks (HBA mode) or can be configured as RAID 0, 1, 10, 5 using SW RAID; RAID 1 is the default setting from the factory. Boot support is available for both physical/HBA mode and RAID mode. The internal SATA BIOS assisted RAID mirroring is not supported with VMware.

HPE 9361-4i RAID Controller

The HPE 9361-4i RAID controller is one of the options for RAID support when Superdome Flex is configured with two (2) or four (4) 2.5" SAS/SATA solid state drives (SSDs) or hard disk drives (HDDs). The HPE 9361-4i provides 12Gb SAS and 6Gb SATA connectivity directly to the internal drive carriers located in the rear of the Superdome Flex Base Chassis. Supports hardware RAID 0, 1, 10, 5, 6; RAID 1 is the default setting from the factory. The HPE 9361-4i provides boot support. The HPE 9361-4i consumes two (2) PCIe slots; one (1) for the RAID controller and one (1) for the SuperCap.

HPE 3154-8e RAID Controller

The HPE 3154-8e provides 12Gb SAS connectivity to external SAS devices like the HPE D3000 Disk Enclosures. The drives can be used as physical disks (HBA mode) or hardware RAID 0, 1, 10, 5, 50, 6, 60. The HPE 3154-8e provides boot support for both physical/HBA mode and RAID mode. The HPE 3154-8e consumes two (2) PCIe slots; one (1) for the RAID controller and one (1) for the SuperCap.

HPE 3162-8i Encryption RAID Controller

The HPE 3162-8i Encryption RAID controller is one of three options when RAID support is required on Superdome Flex when configured with two (2) or four (4) 2.5" SAS/SATA solid state drives (SSDs) or hard disk drives (HDDs). The HPE 3162-8i provides 12Gb SAS and 6Gb SATA connectivity directly to the internal drive carriers located in the rear of the Superdome Flex Base Chassis. Supports hardware RAID 0, 1, 10, 5, 6; RAID 1 is the default setting from the factory. The HPE 3162-8i provides boot support. The HPE 3162-8i consumes one (1) PCIe slots and comes with onboard SuperCap for cache protection. The HPE 3162-8i provides optional controller-based encryption which encrypts data on RAID arrays and single drive RAID 0 with AES 256 encryption. It works at line speed, accelerated by silicon engines, with all SAS and SATA devices that are supported in RAID (SSDs and HDDs) and supports local encryption key management.

Platform Management

The HPE Superdome Flex delivers system administration, control, and platform management both via a programmable Redfish API and also in a comprehensive and concise command-line interface. The Redfish® API can be used in many ways including:

- Directly in simple scripts to obtain inventory and monitoring information
- With HPE OneView* for a graphical user interface, as well as to manage many HPE systems in the datacenter at once
- With Openstack Ironic for Provisioning the OS

The Rack Management Controller (RMC) in Superdome Flex is available either in a standalone, 1U rack-mount component or as an embedded option (the "eRMC") running within the Base Chassis. The standalone RMC is capable of managing a Superdome Flex system from one chassis up to the maximum supported configuration available for Superdome Flex. The embedded version, eRMC, is capable of managing a Superdome Flex system of one or two chassis (4 or 8 processor sockets). The 1U RMC is required for Partitioned systems regardless of socket/chassis count.

The HPE Superdome Flex has a built-in and always available platform management system. By integrating the management into the server platform, Hewlett Packard Enterprise ensures that every Superdome Flex comes with the full set of management features, and simplifies the task of integrating Superdome Flex into the data center. The purpose of the HPE Superdome Flex management system is to:

- Provide built-in tools to manage hardware and provide mission-critical system availability (inventory, monitor, diagnose, configure, maintain, and self-healing)
- Make it easier for users and applications to manage the system (inventory, start, stop, connect console, and so on)

The HPE Superdome Flex manageability system provides a very powerful control point for the system, and the RMC makes managing the HPE Superdome Flex much easier by centralizing the control and building the management into the hardware and firmware of the system. It provides the following features:

- CLI for easy access to all RMC functions, providing potential scripting and power user convenience
- Console, and console logs
- Available remotely connected virtual media or virtual KVM
- Built-in Error Analysis Engine constantly monitors all system hardware, analyzes log and telemetry data, and determines corrective actions for highest system uptime (often performing corrective actions automatically)
- HPE Superdome Flex RMC will interface directly with the HPE Remote Support software for data center wide fault management visibility and tie-in to HPE support services, such as the Insight Online portal

Notes:. Superdome Flex is supported starting with HPE OneView release v4.1.

Security

- Firmware update protected by RMC Admin
- Air-Gapped Manageability
- Secure Out-of-Box
- Secure Protocols
- UEFI Secure Boot
- Directory access control (LDAP/Active Directory)
- Alternatives to PXE (Directed LAN Boot, HTTP Boot)
- Tamper-free updates - components digitally signed and verified
- Multiple local accounts
- Ability to rollback firmware

Service and Support

HPE Services

No matter where you are in your digital transformation journey, you can count on HPE Services to deliver the expertise you need when, where and how you need it. From planning to deployment, ongoing operations and beyond, our experts can help you realize your digital ambitions.

<https://www.hpe.com/services>

Consulting Services

No matter where you are in your journey to hybrid cloud, experts can help you map out your next steps. From determining what workloads should live where, to handling governance and compliance, to managing costs, our experts can help you optimize your operations.

<https://www.hpe.com/services/consulting>

HPE Managed Services

HPE runs your IT operations, providing services that monitor, operate, and optimize your infrastructure and applications, delivered consistently and globally to give you unified control and let you focus on innovation.

[HPE Managed Services | HPE](#)

Operational services

Optimize your entire IT environment and drive innovation. Manage day-to-day IT operational tasks while freeing up valuable time and resources. Meet service-level targets and business objectives with features designed to drive better business outcomes.

<https://www.hpe.com/services/operational>

HPE Complete Care Service

HPE Complete Care Service is a modular, edge-to-cloud IT environment service designed to help optimize your entire IT environment and achieve agreed upon IT outcomes and business goals through a personalized experience. All delivered by an assigned team of HPE Services experts. HPE Complete Care Service provides:

- A complete coverage approach -- edge to cloud
- An assigned HPE team
- Modular and fully personalized engagement
- Enhanced Incident Management experience with priority access
- Digitally enabled and AI driven customer experience

<https://www.hpe.com/services/completecure>

HPE Tech Care Service

HPE Tech Care Service is the operational support service experience for HPE products. The service goes beyond traditional support by providing access to product specific experts, an AI driven digital experience, and general technical guidance to not only reduce risk but constantly search for ways to do things better. HPE Tech Care Service delivers a customer-centric, AI driven, and digitally enabled customer experience to move your business forward. HPE Tech Care Service is available in three response levels. Basic, which provides 9x5 business hour availability and a 2-hour response time. Essential which provides a 15-minute response time 24x7 for most enterprise level customers, and Critical which includes a 6-hour repair commitment where available and outage management response for severity 1 incidents.

<https://www.hpe.com/services/techcare>

HPE Lifecycle Services

HPE Lifecycle Services provide a variety of options to help maintain your HPE systems and solutions at all stages of the product lifecycle. A few popular examples include:

- Lifecycle Install and Startup Services: Various levels for physical installation and power on, remote access setup, installation and startup, and enhanced installation services with the operating system.
- HPE Firmware Update Analysis Service: Recommendations for firmware revision levels for selected HPE products, taking into account the relevant revision dependencies within your IT environment.
- HPE Firmware Update Implementation Service: Implementation of firmware updates for selected HPE server, storage, and solution products, taking into account the relevant revision dependencies within your IT environment.
- Implementation assistance services: Highly trained technical service specialists to assist you with a variety of activities, ranging from design, implementation, and platform deployment to consolidation, migration, project management, and onsite technical forums.
- HPE Service Credits: Access to prepaid services for flexibility to choose from a variety of specialized service activities, including assessments, performance maintenance reviews, firmware management, professional services, and operational best practices.

Notes: To review the list of Lifecycle Services available for your product go to:

<https://www.hpe.com/services/lifecycle>

For a list of the most frequently purchased services using service credits, see the [HPE Service Credits Menu](#)

Other Related Services from HPE Services:

HPE Education Services

Training and certification designed for IT and business professionals across all industries. Broad catalogue of course offerings to expand skills and proficiencies in topics ranging from cloud and cybersecurity to AI and DevOps. Create learning paths to expand proficiency in a specific subject. Schedule training in a way that works best for your business with flexible continuous learning options.

<https://www.hpe.com/services/training>

Defective Media Retention

An option available with HPE Complete Care Service and HPE Tech Care Service and applies only to Disk or eligible SSD/Flash Drives replaced by HPE due to malfunction.

Consult your HPE Sales Representative or Authorized Channel Partner of choice for any additional questions and services options.

Parts and Materials

HPE will provide HPE-supported replacement parts and materials necessary to maintain the covered hardware product in operating condition, including parts and materials for available and recommended engineering improvements.

Parts and components that have reached their maximum supported lifetime and/or the maximum usage limitations as set forth in the manufacturer's operating manual, product QuickSpecs, or the technical product data sheet will not be provided, repaired, or replaced as part of these services.

How to Purchase Services

Services are sold by Hewlett Packard Enterprise and Hewlett Packard Enterprise Authorized Service Partners:

- Services for customers purchasing from HPE or an enterprise reseller are quoted using HPE order configuration tools.
- Customers purchasing from a commercial reseller can find services at <https://ssc.hpe.com/portal/site/ssc/>

AI Powered and Digitally Enabled Support Experience

Achieve faster time to resolution with access to product-specific resources and expertise through a digital and data driven customer experience

Sign into the HPE Support Center experience, featuring streamlined self-serve case creation and management capabilities with inline knowledge recommendations. You will also find personalized task alerts and powerful troubleshooting support through an intelligent virtual agent with seamless transition when needed to a live support agent.

<https://support.hpe.com/hpesc/public/home/signin>

Consume IT On Your Terms

[HPE GreenLake](#) edge-to-cloud platform brings the cloud experience directly to your apps and data wherever they are-the edge, colocations, or your data center. It delivers cloud services for on-premises IT infrastructure specifically tailored to your most demanding workloads. With a pay-per-use, scalable, point-and-click self-service experience that is managed for you, HPE GreenLake edge-to-cloud platform accelerates digital transformation in a distributed, edge-to-cloud world.

- Get faster time to market
- Save on TCO, align costs to business
- Scale quickly, meet unpredictable demand
- Simplify IT operations across your data centers and clouds

To learn more about HPE Services, please contact your Hewlett Packard Enterprise sales representative or Hewlett Packard Enterprise Authorized Channel Partner. Contact information for a representative in your area can be found at "Contact HPE"

<https://www.hpe.com/us/en/contact-hpe.html>

For more information

<http://www.hpe.com/services>

Configuration Information

Ordering and Configuration

This section lists some of the steps required to configure a Factory Integrated Model. To ensure only valid configurations are ordered, Hewlett Packard Enterprise recommends the use of an HPE approved configurator. Contact your local sales representative for information on CTO product offerings and requirements.

Notes:

- Configure-to-order servers must start with a CTO Chassis
- FIO indicates that this option is a Factory Installable Option.
- The Partition Expansion chassis are required for nPar support

Additional Technical documentation may be found at: https://support.hpe.com/hpesc/public/docDisplay?docId=a00041142en_us&docLocale=en_US

Rack choice

Some options below are specific to the processor family you are choosing. Options are noted or titled accordingly.

If No Rack Option is selected then a Virtual Rack should be selected

Description	SKU
HPE Virtual Rack	M0S66A

All Superdome Flex Systems

Management

Description	SKU
HPE Superdome Flex Rack Management Controller	Q2N07A

Notes: The rack management controller (RMC) is optional for configurations up to 8-sockets (2-chassis). Systems 12-sockets (3-chassis) and greater require Min 1/Max 1 RMC. RMC is mandatory for any size Partitioned system

Scale Activation Kits

Description	SKU
HPE Superdome Flex 4-socket Activation Kit	R0X10A

HPE Superdome Flex 8-socket Interconnect and Scale Activation Kit	Q2N14A
HPE Superdome Flex 12-socket Interconnect and Scale Activation Kit	Q2N15A
HPE Superdome Flex 16-socket Interconnect and Scale Activation Kit	Q2N16A
HPE Superdome Flex 20-socket Interconnect and Scale Activation Kit	Q2N17A
HPE Superdome Flex 24-socket Interconnect and Scale Activation Kit	Q2N18A
HPE Superdome Flex 28-socket Interconnect and Scale Activation Kit	Q2N19A
HPE Superdome Flex 32-socket Interconnect and Scale Activation Kit	Q2N20A
HPE Superdome Flex 8-socket Interconnect and Partition Activation Kit	Q9Z03A
HPE Superdome Flex 12-socket Interconnect and Partition Activation Kit	Q9Z04A
HPE Superdome Flex 16-socket Interconnect and Partition Activation Kit	Q9Z05A
HPE Superdome Flex 20-socket Interconnect and Partition Activation Kit	Q9Z06A
HPE Superdome Flex 24-socket Interconnect and Partition Activation Kit	Q9Z07A
HPE Superdome Flex 28-socket Interconnect and Partition Activation Kit	Q9Z08A
HPE Superdome Flex 32-socket Interconnect and Partition Activation Kit	Q9Z09A

Notes: The Superdome Flex scale activation kits are required for configurations all systems a System/Complex size (i.e. number of sockets) will determine which kit is required.

Optical Drives

Description	SKU
HPE Superdome Flex DVD-RW Drive	Q2N41A
HPE Superdome Flex DVD-R Drive	Q2N42A

Notes: The Base Chassis and Partition Expansion Chassis requires one (1) DVD drive

Internal SATA Solid State Drives

Notes:

- A total of 0, 2, or 4 internal drives supported per Base Chassis or Partition Expansion Chassis
- SATA SSDs use the embedded controller
- RAID 1 is configured by default
- No mixing of drive types or capacities

HPE Superdome Flex 480GB SATA 6G Mixed Use SFF RW Multi Vendor SSD	R9H09A
HPE Superdome Flex 960GB SATA 6G Mixed Use SFF RW Multi Vendor SSD	R9H10A
HPE Superdome Flex 1.92TB SATA 6G Mixed Use SFF RW Multi Vendor SSD	R9H11A
HPE Superdome Flex 3.84TB SATA 6G Mixed Use SFF RW Multi Vendor SSD	R9H12A

Internal SATA Hard Disk Drives

Notes:

- A total of 0, 2, or 4 internal drives supported per Base Chassis or Partition Expansion Chassis
- SATA HDDs use the embedded controllerRAID 1 is configured by default
- No mixing of drive types or capacities

HPE 1TB SATA 6G Midline 7.2K SFF (2.5in) RW 1yr Wty Digitally Signed Firmware HDD	R3K79A
HPE 2TB SATA 6G Midline 7.2K SFF (2.5in) RW 1yr Wty 512e Digitally Signed Firmware HDD	R3K80A

Internal SAS Hard Disk Drives

Notes:

- A total of 0, 2, or 4 internal drives supported per Base Chassis or Partition Expansion Chassis
- SAS HDDs require one (1) HPE 9361-4i RAID Controller (Q2N11A) or one (1) HPE 3162-8i Encryption RAID Controller (R0Y99A)
- RAID 1 is configured by default
- No mixing of drive types or capacities

HPE 600GB SAS 12G Mission Critical 15K SFF RW 3-year Warranty Multi Vendor HDD	S0M02A
HPE 1.8TB SAS 12G Mission Critical 10K SFF BC 3-year Warranty 512e Multi Vendor HDD	S0M04A
HPE 300GB SAS 12G Enterprise 15K SFF (2.5in) RW 3yr Wty Digitally Signed Firmware HDD	Q6L99A
HPE 600GB SAS 12G Enterprise 15K SFF (2.5in) RW 3yr Wty Digitally Signed Firmware HDD	R0Z00A
HPE 900GB SAS 12G Enterprise 15K SFF (2.5in) RW 3yr Wty Digitally Signed Firmware HDD	R0Z01A
HPE 300GB SAS 12G Enterprise 10K SFF (2.5in) RW 3yr Wty Digitally Signed Firmware HDD	Q6M02A
HPE 600GB SAS 12G Enterprise 10K SFF (2.5in) RW 3yr Wty Digitally Signed Firmware HDD	Q6M03A
HPE 1.2TB SAS 12G Enterprise 10K SFF (2.5in) RW 3yr Wty Digitally Signed Firmware HDD	Q6M04A
HPE 1.8TB SAS 12G Enterprise 10K SFF (2.5in) RW 3yr Wty 521e Digitally Signed Firmware HDD	Q6M05A
HPE 2.4TB SAS 12G Enterprise 10K SFF (2.5in) RW 3yr Wty Digitally Signed Firmware HDD	Q9R86A

Internal SAS Solid State Drives

Notes:

- A total of 0, 2, or 4 internal drives supported per Base Chassis or Partition Expansion Chassis
- SAS SSDs require one (1) HPE 9361-4i RAID Controller (Q2N11A) or one (1) HPE 3162-8i Encryption RAID Controller (R0Y99A)
- RAID 1 is configured by default
- No mixing of drive types or capacities

Description	SKU
HPE Superdome Flex 1.6TB SAS 24G Mixed Use SFF RW PM1655 SSD	R9H03A
HPE Superdome Flex 3.2TB SAS 24G Mixed Use SFF RW PM1655 SSD	R9H04A
HPE Superdome Flex 800GB SAS 24G Mixed Use SFF RW Multi Vendor SSD	R9H05A
HPE Superdome Flex 1.6TB SAS 24G Mixed Use SFF RW Multi Vendor SSD	R9H06A
HPE Superdome Flex 3.2TB SAS 24G Mixed Use SFF RW Multi Vendor SSD	R9H07A
HPE Superdome Flex 6.4TB SAS 24G Mixed Use SFF RW Multi Vendor SSD	R9H08A
HPE Superdome Flex 7.68TB SAS 24G Read Intensive SFF RW Multi Vendor SSD	R9H84A
HPE Superdome Flex 15.36TB SAS 24G Read Intensive SFF RW Multi Vendor SSD	R9H85A

PCIe Infrastructure

Notes:

- Each chassis requires exactly one (1) PCIe option below
- The Base Chassis and Partition Expansion Chassis requires either Q2N08A or Q2N09A

HPE Superdome Flex PCIe Full Height 12-slot 3 Riser Configuration Kit	Q2N08A
HPE Superdome Flex PCIe Low Profile 16-slot 4 Riser Configuration Kit	Q2N09A
HPE Superdome Flex PCIe 0-slot Compute Only Configuration Kit	Q2N10A

Notes:

- Q2N08A includes (4) Full Height x16, (4) Full Height x8, (2) Low Profile x16, (2) Low Profile x8.
Maximum Length of PCIe card when installed in 12-slot Bulkhead Outside Riser = 10.5"; Center Riser Maximum = 6.6"
- Q2N09A includes (8) Low Profile x16 and (8) Low Profile x8. Maximum length of PCIe card when installed in 16-slt Bulkhead = 6.6"
- Q2N10A bulkhead has no PCIe slots

RAID Controllers

HPE Superdome Flex 9361-4i Internal RAID Controller	Q2N11A
---	--------

Notes:

- Supports SAS and SATA drives
- Max one (1) per Base Chassis
- Occupies (2) PCIe slots; (1) for the card, (1) for the SuperCap

HPE 3154-8e 8-port External RAID Controller	Q6M15A
---	--------

Notes:

- Supports SAS and SATA drives
- Max one (1) per Base Chassis
- Occupies (2) PCIe slots; (1) for the card, (1) for the SuperCap
- Q6M15A is equivalent to HPE P408e-p (804405-B21)

HPE 3162-8i Encryption Option 8-port RAID Controller	R0Y99A
--	--------

Fibre Channel HBAs

Description	SKU
HPE SN1100Q 16Gb Dual Port Fibre Channel Host Bus Adapter	P9D94A
HPE SN1200E 16Gb Dual Port Fibre Channel Host Bus Adapter	Q0L14A
HPE SN1600E 32Gb Dual Port Fibre Channel Host Bus Adapter	Q0L12A
HPE SN1610E 32Gb 2-port Fibre Channel Host Bus Adapter	R2J63A
HPE SN1610Q 32Gb 2-port Fibre Channel Host Bus Adapter	R2E09A
HPE SN1700E 64Gb 1-port Fibre Channel Host Bus Adapter	R7N77A
HPE SN1700Q 64Gb 1-port Fibre Channel Host Bus Adapter	R7N86A

Notes: Max eight (8) per chassis/ Max 16 per system/partition

Networking cards

HPE Ethernet 100Gb 1-port QSFP28 MCX515A-CCAT Adapter	874253-B21
---	------------

Notes:

- Max eight (8) per chassis/Max 16 per system/partition, see exceptions below:

- The 10/25Gb 2-port SFP28 MCX4121A-ACUT Adapter (817753-B21) and 10Gb 2-port SFP+ X710-DA2 Adapter (727055-B21) require transceivers or direct attached copper (DAC) cables (min 1/max2)

- The 100Gb 1-port QSFP28 MCX515A-CCAT Adapter (874253-B21)/Max four (4) per chassis/Max 16 per system/partition

– Server networking transceiver and cable compatibility matrix can be found [here](#)

InfiniBand cards

HPE 100Gb 1-port OP101 QSFP28 x16 PCIe Gen3 with Intel Omni-Path Architecture Adapter	829335-B21
Notes: Max two (2) 829335-B21 per chassis/Max 4 per system/partition.	
HPE InfiniBand HDR100/Ethernet 100Gb 1-port QSFP56 PCIe3 x16 MCX653105A-ECAT Adapter	P06250-H21
HPE InfiniBand HDR100/Ethernet 100Gb 2-port QSFP56 PCIe3 x16 MCX653106A-ECAT Adapter	P06251-H21

Notes:

- Max four (4) P06250-H21 or P06251-H21 per chassis/Max 16 per system
- P06251-H21 is supported with VMWare in Ethernet Only mode
- No mixing of InfiniBand card types in the same system
- Intel's MPI stack allows only 4 cards so if repartitioning creates more than 4 cards per partition, the additional cards will need to be removed

GPU Accelerators

HPE Superdome Flex 8 Pin GPU Cable Kit	Q6M17A
HPE Superdome Flex 6+2 Pin GPU Cable Kit	Q6M16A
HPE Superdome Flex/280 PCIe 8-pin/16-pin 310W Accelerator Cable Kit	S2A41A
NVIDIA L4 24GB PCIe Accelerator for HPE	S0K89C
NVIDIA H100 NVL 94GB PCIe Accelerator for HPE	S2D86C

Notes:

- A30 GPU Accelerators require one Q6M17A cable kit for each Accelerator
- No mixing of GPU controller types in the same chassis, system or partition
- GPU Accelerators require the Q2N08A (12-slot PCIe riser) to be in the same Chassis
- GPU Accelerators are 'double-wide' and therefore utilize two adjacent PCIe slots (eg. Slots 1/2; Slots 3/4; Slots 13/14; Slots 15/16).
- Inner node peer-to-peer communication is not supported with Superdome Flex
- H100, H100 NVL and L40 GPU Accelerator requires one S2A41A cable Kit for each Accelerator.
- H100, H100 NVL max operation power is limited to 310 Watts
- For H100 NVL Max four (4) per chassis/Max 8 per system
- NVIDIA L4 Accelerator is supported with both Q2N08A (12-slot PCIe riser) and Q2N09A (16-slot PCIe riser). For L4, Max five (5) per chassis/Max 10 per partition/system. Recommended max 2 per riser

Foundation Software

Description	SKU
HPE Foundation Software 2 for Red Hat Enterprise Linux Media FIO LTU	Q7N13A
HPE Foundation Software 2 for SUSE Linux Enterprise Server Media FIO LTU	Q7N14A
HPE Foundation Software 2 for Red Hat Enterprise Linux Media	Q7Y82A
HPE Foundation Software 2 for SUSE Linux Enterprise Server Media	Q7Y83A
HPE Foundation Software 2 for Oracle Linux Media	Q7Y84A
HPE Foundation Software 2 for Red Hat Enterprise Linux Media License RTU	Q7N11A
HPE Foundation Software 2 for SUSE Linux Enterprise Server Media License RTU	Q7N12A
HPE Foundation Software 2 for Oracle License RTU	Q7N16A

Notes:

- Exactly one (1) RTU is required per system with a Linux O/S distribution
- Minimum one (1) Foundation SW FIO or Media is required per system with a Linux O/S distribution
- Selected RTU must match selected FIO and/or Media option

System Expansion and Upgrades

System Expansion Kits are utilized when scaling up a Superdome Flex. When adding either Expansion chassis or additional Partition chassis, select the appropriate beginning and ending size of your system. (all Superdome Flex Systems)

Description	SKU
HPE Superdome Flex 4s-8s Upgrade Interconnect and Scale Activation Kit	Q2N57A #001
HPE Superdome Flex 4s-12s Upgrade Interconnect and Scale Activation Kit	Q2N57A #002
HPE Superdome Flex 4s-16s Upgrade Interconnect and Scale Activation Kit	Q2N57A #003
HPE Superdome Flex 4s-20s Upgrade Interconnect and Scale Activation Kit	Q2N57A #004
HPE Superdome Flex 4s-24s Upgrade Interconnect and Scale Activation Kit	Q2N57A #005
HPE Superdome Flex 4s-28s Upgrade Interconnect and Scale Activation Kit	Q2N57A #006

HPE Superdome Flex 4s-32s Upgrade Interconnect and Scale Activation Kit	Q2N57A #007
HPE Superdome Flex 8s-12s Upgrade Interconnect and Scale Activation Kit	Q2N57A #008
HPE Superdome Flex 8s-16s Upgrade Interconnect and Scale Activation Kit	Q2N57A #009
HPE Superdome Flex 8s-20s Upgrade Interconnect and Scale Activation Kit	Q2N57A #010
HPE Superdome Flex 8s-24s Upgrade Interconnect and Scale Activation Kit	Q2N57A #011
HPE Superdome Flex 8s-28s Upgrade Interconnect and Scale Activation Kit	Q2N57A #012
HPE Superdome Flex 8s-32s Upgrade Interconnect and Scale Activation Kit	Q2N57A #013
HPE Superdome Flex 12s-16s Upgrade Interconnect and Scale Activation Kit	Q2N57A #014
HPE Superdome Flex 12s-20s Upgrade Interconnect and Scale Activation Kit	Q2N57A #015
HPE Superdome Flex 12s-24s Upgrade Interconnect and Scale Activation Kit	Q2N57A #016
HPE Superdome Flex 12s-28s Upgrade Interconnect and Scale Activation Kit	Q2N57A #017
HPE Superdome Flex 12s-32s Upgrade Interconnect and Scale Activation Kit	Q2N57A #018
HPE Superdome Flex 16s-20s Upgrade Interconnect and Scale Activation Kit	Q2N57A #019
HPE Superdome Flex 16s-24s Upgrade Interconnect and Scale Activation Kit	Q2N57A #020
HPE Superdome Flex 16s-28s Upgrade Interconnect and Scale Activation Kit	Q2N57A #021
HPE Superdome Flex 16s-32s Upgrade Interconnect and Scale Activation Kit	Q2N57A #022
HPE Superdome Flex 20s-24s Upgrade Interconnect and Scale Activation Kit	Q2N57A #023
HPE Superdome Flex 20s-28s Upgrade Interconnect and Scale Activation Kit	Q2N57A #024
HPE Superdome Flex 20s-32s Upgrade Interconnect and Scale Activation Kit	Q2N57A #025
HPE Superdome Flex 24s-28s Upgrade Interconnect and Scale Activation Kit	Q2N57A #026
HPE Superdome Flex 24s-32s Upgrade Interconnect and Scale Activation Kit	Q2N57A #027
HPE Superdome Flex 28s-32s Upgrade Interconnect and Scale Activation Kit	Q2N57A #028
HPE Superdome Flex 4s-8s Upgrade Interconnect and Partition Activation Kit	Q2N57A #101
HPE Superdome Flex 4s-12s Upgrade Interconnect and Partition Activation Kit	Q2N57A #102
HPE Superdome Flex 4s-16s Upgrade Interconnect and Partition Activation Kit	Q2N57A #103
HPE Superdome Flex 4s-20s Upgrade Interconnect and Partition Activation Kit	Q2N57A #104
HPE Superdome Flex 4s-24s Upgrade Interconnect and Partition Activation Kit	Q2N57A #105
HPE Superdome Flex 4s-28s Upgrade Interconnect and Partition Activation Kit	Q2N57A #106
HPE Superdome Flex 4s-32s Upgrade Interconnect and Partition Activation Kit	Q2N57A #107
HPE Superdome Flex 8s-12s Upgrade Interconnect and Partition Activation Kit	Q2N57A #108
HPE Superdome Flex 8s-16s Upgrade Interconnect and Partition Activation Kit	Q2N57A #109
HPE Superdome Flex 8s-20s Upgrade Interconnect and Partition Activation Kit	Q2N57A #110
HPE Superdome Flex 8s-24s Upgrade Interconnect and Partition Activation Kit	Q2N57A #111
HPE Superdome Flex 8s-28s Upgrade Interconnect and Partition Activation Kit	Q2N57A #112
HPE Superdome Flex 8s-32s Upgrade Interconnect and Partition Activation Kit	Q2N57A #113
HPE Superdome Flex 12s-16s Upgrade Interconnect and Partition Activation Kit	Q2N57A #114
HPE Superdome Flex 12s-20s Upgrade Interconnect and Partition Activation Kit	Q2N57A #115
HPE Superdome Flex 12s-24s Upgrade Interconnect and Partition Activation Kit	Q2N57A #116
HPE Superdome Flex 12s-28s Upgrade Interconnect and Partition Activation Kit	Q2N57A #117
HPE Superdome Flex 12s-32s Upgrade Interconnect and Partition Activation Kit	Q2N57A #118
HPE Superdome Flex 16s-20s Upgrade Interconnect and Partition Activation Kit	Q2N57A #119
HPE Superdome Flex 16s-24s Upgrade Interconnect and Partition Activation Kit	Q2N57A #120
HPE Superdome Flex 16s-28s Upgrade Interconnect and Partition Activation Kit	Q2N57A #121
HPE Superdome Flex 16s-32s Upgrade Interconnect and Partition Activation Kit	Q2N57A #122
HPE Superdome Flex 20s-24s Upgrade Interconnect and Partition Activation Kit	Q2N57A #123
HPE Superdome Flex 20s-28s Upgrade Interconnect and Partition Activation Kit	Q2N57A #124
HPE Superdome Flex 20s-32s Upgrade Interconnect and Partition Activation Kit	Q2N57A #125
HPE Superdome Flex 24s-28s Upgrade Interconnect and Partition Activation Kit	Q2N57A #126
HPE Superdome Flex 24s-32s Upgrade Interconnect and Partition Activation Kit	Q2N57A #127
HPE Superdome Flex 28s-32s Upgrade Interconnect and Partition Activation Kit	Q2N57A #128

Base Chassis

For Intel Xeon 62XX and 82XX processors

Description	SKU
HPE Superdome Flex 4-socket Base Chassis	Q2N05C

Notes:

- Every Superdome Flex system must have min 1/max 1 Base Chassis
- Adding Option code "#0D1" to the chassis will integrate the chassis into the rack (which must be on the same order)
- Power supplies are separate sku and are mandatory to ordered. Configuration tools will automatically pull in proper sku(s)

HPE Superdome Flex for SAP HANA TDI/Base Configuration 4-socket Base Chassis	Q7G51C
--	--------

Notes:

- Use the HPE SD Flex SAP HANA 4s Base Chassis for SAP HANA workloads

- Every Superdome Flex system must have min 1/max 1 Base Chassis
- Adding Option code "#0D1" to the chassis will integrate the chassis into the rack (which must be on the same order)
- Power supplies are separate sku and are mandatory to ordered. Configuration tools will automatically pull in proper sku(s)

Expansion Chassis Options

HPE Superdome Flex 4-socket Expansion Chassis	Q2N06C
---	--------

Notes:

- Adding Option code "#0D1" to the chassis will integrate the chassis into the rack (which must be on the same order)
- Power supplies are separate sku and are mandatory to ordered. Configuration tools will automatically pull in proper sku(s)

HPE Superdome Flex for SAP HANA TDI/Base Configuration 4-socket Expansion Chassis	Q7G52C
---	--------

Notes:

- Adding Option code "#0D1" to the chassis will integrate the chassis into the rack (which must be on the same order)
- Power supplies are separate sku and are mandatory to ordered. Configuration tools will automatically pull in proper sku(s)

HPE Superdome Flex 4-socket Partition Expansion Chassis	Q6L89C
---	--------

Notes:

- Adding Option code "#0D1" to the chassis will integrate the chassis into the rack (which must be on the same order)
- Power supplies are separate sku and are mandatory to ordered.

HPE Superdome Flex for SAP HANA TDI/Base Configuration 4-socket Partition Expansion Chassis	Q7G53C
---	--------

Notes:

- Adding Option code "#0D1" to the chassis will integrate the chassis into the rack (which must be on the same order)
- Mixing of standard and partition expansion chassis within a single complex/system is not supported
- Power supplies are separate sku and are mandatory to ordered. Configuration tools will automatically pull in proper sku(s)

Power Supply Options for Base and Expansion Chassis

Description	SKU
HPE Superdome Flex 4x 1600W Titanium Hot Plug Power Supply Kit	S0A85A
HPE Superdome Flex 4x 2130W Titanium Hot Plug Power Supply Kit	S0A86A

Notes:

- S0A85A and S0A86A is a kit of four (4) power supplies and four (4) power cords
- For Titanium power supply, each chassis requires 1 x S0A85A or S0A86A.

SAP HANA Tracking

Description	SKU
HPE Superdome Flex for SAP HANA Scale-up Solution Tracking	R1C96A
HPE Superdome Flex for SAP HANA Scale-out Solution Tracking	R1C97A

Notes: One of the SAP HANA tracking SKUs must be ordered with the SAP HANA chassis

Processors

Notes: Each chassis requires exactly four (4) processors

Intel Xeon-Platinum 8280L (2.7GHz/28-core/205W) Processor Kit for HPE Superdome Flex	R0X01A
Intel Xeon-Platinum 8280 (2.7GHz/28-core/205W) Processor Kit for HPE Superdome Flex	R0W99A
Intel Xeon-Platinum 8276L (2.2GHz/28-core/165W) Processor Kit for HPE Superdome Flex	R0W98A
Intel Xeon-Platinum 8276 (2.2GHz/28-core/165W) Processor Kit for HPE Superdome Flex	R0W96A
Intel Xeon-Platinum 8270 (2.7GHz/26-core/205W) Processor Kit for HPE Superdome Flex	R0W95A
Intel Xeon-Platinum 8268 (2.9GHz/24-core/205W) Processor Kit for HPE Superdome Flex	R0W94A
Intel Xeon-Platinum 8260L (2.4GHz/24-core/165W) Processor Kit for HPE Superdome Flex	R0W93A
Intel Xeon-Platinum 8260 (2.4GHz/24-core/165W) Processor Kit for HPE Superdome Flex	R0W91A
Intel Xeon-Platinum 8256 (3.8GHz/4-core/105W) Processor Kit for HPE Superdome Flex	R0W88A
Intel Xeon-Platinum 8253 (2.2GHz/16-core/125W) Processor Kit for HPE Superdome Flex	R0W89A
Intel Xeon-Gold 6254 (3.1GHz/18-core/200W) Processor Kit for HPE Superdome Flex	R0W87A
Intel Xeon-Gold 6252 (2.1GHz/24-core/150W) Processor Kit for HPE Superdome Flex	R0W86A
Intel Xeon-Gold 6248 (2.5GHz/20-core/150W) Processor Kit for HPE Superdome Flex	R0W85A
Intel Xeon-Gold 6246 (3.3GHz/12-core/165W) Processor Kit for HPE Superdome Flex	R3T68A
Intel Xeon-Gold 6244 (3.6GHz/8-core/150W) Processor Kit for HPE Superdome Flex	R0W84A
Intel Xeon-Gold 6242 (2.8GHz/16-core/150W) Processor Kit for HPE Superdome Flex	R0W81A
Intel Xeon-Gold 6240 (2.6GHz/18-core/150W) Processor Kit for HPE Superdome Flex	R0W80A
Intel Xeon-Gold 6240L (2.6GHz/18-core/150W) Processor Kit for HPE Superdome Flex	R0W83A
Intel Xeon-Gold 6230 (2.1GHz/20-core/125W) Processor Kit for HPE Superdome Flex	R0W79A
Intel Xeon-Gold 6226 (2.7GHz/12-core/125W) Processor Kit for HPE Superdome Flex	R0Y98A

Notes: No mixing of processors types within a single chassis or partition

DDR4 Memory

Intel Xeon

Persistent Memory

- HPE Persistent Memory quantity and type must be consistent across system complex or partitions. If partitions have different memory configurations, repartitioning is not supported
- HPE Persistent Memory DIMMS must be equally populated across each socket as either 1, 2 or 6 per socket
- HPE Persistent Memory may only be used in a system/complex of 16 sockets or less. Future release will increase socket counts
- Minimum OS levels are required for support of HPE Persistent Memory
- Superdome Flex supports only App-direct Mode on HPE Persistent Memory

Additional Options

Power Distribution Options

The following PDUs are supported with Superdome Flex-refer to the server menu for ordering & configuration rules.


Description	SKU
HPE G2 IEC C20 Input/(8) C13 Expansion Outlets/PDU Extension Bar Kit	P9Q66A
Notes: Two are required.	

HPE Standard Series G2 Basic Power Distribution Units (PDU) QuickSpecs:
<https://h20195.www2.hpe.com/v2/GetDocument.aspx?docname=c05324691>

Memory

Superdome Flex DDR4 DIMM loading rules and numbering (top-down view of chassis)

Loading Rules

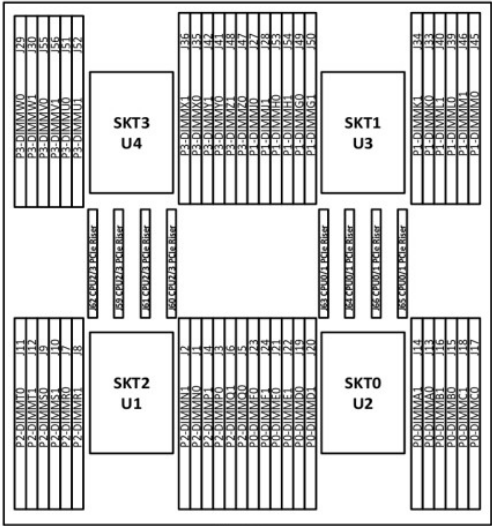

Superdome Flex DIMM Arrangement

- Half populated:
J13, J49, J1, J51, J19, J33, J7, J35, J15, J53, J3, J55, J21, J39, J9, J41, J17, J27, J5, J29, J23, J45, J11, J47
- Fully populated add:
J14, J50, J2, J52, J20, J34, J8, J36, J16, J54, J4, J56, J22, J40, J10, J42, J18, J28, J6, J30, J24, J46, J12, J48

DDR4 DIMMs Numbering

The following table shows the supported configurations as shipped from the factory.
Notes: DDR4 Memory Mixing of 64GB DDR4 and 128GB DDR4 is allowed. Populate with ½ each type. See Note on mixing rules when HPE Persistent Memory is utilized. No other mixing is supported within the same chassis or HPE nPar .

Recommended Configurations per Superdome Flex chassis			
Total Memory per Chassis (GBytes)	Number of DIMMS		
	32 GB	64 GB	128 GB
768 GB	24	-	-
1536 GB	48	-	-
1536 GB	-	24	-
3072 GB	-	48	-
3072 GB	-	-	24

4608 GB	-	24	24
6144 GB	-	-	48

Superdome Flex DDR4 DIMM configurations shipped from the factory .

Technical Specifications

This section describes the physical and environmental information for a chassis.

Superdome Flex chassis (This is just a template)	
Physical Information	
Site planning and installation included	Yes
Maximum Heat dissipation (fully populated system)	17.40 kBTU/hr
Depth (handle to handle)	879.5 mm / 34.63"
Width (not including mounting rails)	445 mm / 17.5"
Height	218.2 mm / 8.59" (5U)
Weight - Maximum (fully populated)	Range between 40.8 kg / 90 lb to 56.7 kg / 125 lb
Electrical Characteristics	
Single phase (200/240)	4 IE320-C13
Maximum Input Power total	5.27 KVA
Environmental Characteristics	
Cooling airflow (front to back)	Without GPUs: 300 CFM typical; 650 CFM max With GPUs: 475 CFM typical; 650 CFM max
Acoustics	82 dBA (maximum) 73 dBA (typical)
Temperature - Recommended Operating Range ^{1,2}	+18°C to +27°C
Temperature - Allowable Operating Range ^{1,2}	+5°C to +35°C
Maximum rate of temperature change	20°C/hr non-condensing
Non operating temperature (storage)	-40°C to +60°C
Air quality	Gaseous contaminants must be at the G1 level or less as defined by ISA Standard ISA-71.04-1985
Humidity - Recommended Operating Range (non-condensing) ¹	-9°C DP to 15°C DP and 60% RH
Humidity - Allowable Operating Range (non-condensing) ¹	-12 °C DP and 8% RH to 24 °C DP and 85% RH
Non operating relative humidity (storage)	8% RH to 90% RH and 32 °C DP
Maximum Operating altitude	3050m (10,000 ft)
Maximum Non operating altitude (storage)	4500m (15,000 ft) non-pressurized

Notes:

- The Recommended Operating Range is recommended for continuous operation. Operating within the Allowable Operating Range is supported but may result in a decrease in system performance.
- All temperature ratings shown are for sea level. An altitude de-rating of 1°C per 300 m above 1524 m is applicable. No direct sunlight allowed. Upper operating limit is 3,048 m (10,000 ft).

This section describes the physical and environmental information for an RMC.

External Rack Management Controller (RMC)	
Physical Information	
Site planning and installation included	Yes
Maximum Heat dissipation (fully populated system)	171 BTU/hr
Depth	758 mm / 29.84"
Width	437 mm / 17.2"
Height	44 mm / 1.72" (1U)
Weight - Maximum (fully populated)	9.1 kg / 20 lb
Electrical Characteristics	
Single phase (100/120 VAC)	1 90-132VAC
Single phase (200/240)	1 180-264VAC
Maximum Input Power total	51 VA
Environmental Characteristics	
Cooling airflow	35 CFM typical; 35 CFM max
Acoustics	68 dBA (maximum)
Temperature - Recommended Operating Range ^{1,2}	+18°C to +27°C
Temperature - Allowable Operating Range ^{1,2}	+5°C to +37°C
Maximum rate of temperature change	20°C/hr
Non-operating temperature (storage)	-40°C to +60°C
Air quality	Gaseous contaminants must be at the G1 level or less as defined by ISA Standard ISA-71.04-1985
Humidity - Recommended Operating Range (non-condensing) ¹	+5.5 °C DP to 15°C DP and 65% RH

Humidity - Allowable Operating Range (non-condensing)1	-12 °C DP and 8% RH to 24 °C DP and 85% RH
Non-operating relative humidity (storage)	8% RH to 90% RH and 32 °C DP
Maximum Operating altitude	3050m (10,000 ft)
Maximum Non-operating altitude (storage)	4500m (15,000 ft) non-pressurized

Environmental Info

Regulatory model numbers:

- Chassis (Q2N05A, Q2N06A, Q7G51A, Q7G52A, Q6L89A, Q7G53A, Q2N05B, Q2N06B, Q7G51B, Q7G52B, Q6L89B, Q7G53B), RMN: CHPF-067
- Rack Management Controller (Q2N07A), RMN: RSVLA-02

Additional Power Data

The maximum power figures given were developed with the maximum configuration running applications designed to draw the maximum power possible. It is highly unlikely that any real-world application will result in this amount of power use for any significant time period.

Summary of Changes

Date	Version History	Action	Description of Change
15-Dec-2025	Version 43	Changed	QuickSpecs was updated and rebranded, GPU Accelerators note added.
23-Jun-2025	Version 42	Changed	Standard Features and Configuration Information sections were updated - Changes in these sections reflects 727055-B21 Ethernet SKU removal.
		Removed	Obsolete SKUs were removed - 727055-B21, R0X06A, R0X07A, P9Q60A, P9Q63A, P9Q39A, P9Q41A
13-Jan-2025	Version 41	Changed	Standard Features section was updated
02-Dec-2024	Version 40	Changed	Standard Features section was updated
05-Aug-2024	Version 39	Changed	Standard Features and Configuration Information sections were updated
08-Apr-2024	Version 38	Changed	Standard Features section was updated
01-Apr-2024	Version 37	Changed	Standard Features and Configuration Information sections were updated
26-Feb-2024	Version 36	Changed	Overview, Standard Features, Service and Support, and Configuration Information sections were updated.
03-Apr-2023	Version 35	Changed	Configuration Information section was updated. New SKU was added in GPU Accelerators menu
19-Dec-2022	Version 34	Changed	Configuration Information section was updated
05-Dec-2022	Version 33	Changed	Overview and Configuration Information sections were updated
18-Jul-2022	Version 32	Changed	Standard Features and Configuration Information sections were updated Obsolete SKU - 878038-H21 was removed
06-Jun-2022	Version 31	Changed	Standard Features and Configuration Information sections were updated SKU - R6B53A was removed
14-Mar-2022	Version 30	Changed	Standard Features and Configuration Information sections were updated SKU - R8T79A was removed
07-Mar-2022	Version 29	Changed	Standard Features and Configuration Information sections were updated
06-Dec-2021	Version 28	Changed	Standard Features and Configuration Information sections were updated
04-Oct-2021	Version 27	Changed	Overview, Standard Features, Additional, Configuration Information and Memory sections were updated Service and Support Pointnext Tech Care and Complete Care information updated
15-Mar-2021	Version 26	Changed	Standard Features, Configuration Information and Technical Specifications sections were updated
01-Feb-2021	Version 25	Changed	Overview, Standard Features, and Configuration Information sections were updated. Some SKUs were added and deleted in Configuration Information section.
07-Dec-2020	Version 24	Changed	Overview, Configuration Information, and Technical Specifications sections were updated
05-Oct-2020	Version 23	Changed	Standard Features section was updated.
08-Sep-2020	Version 22	Changed	Overview, Standard Features, Configuration Information, and Additional Options sections were updated.
10-Aug-2020	Version 21	Changed	Configuration Information section was updated.
06-Jul-2020	Version 20	Changed	Overview, Standard Features, Configuration Information, and Additional Options sections were updated.
20-Apr-2020	Version 19	Changed	Overview, Standard Features, Configuration Information, and Additional Options sections were updated.
Date	Version History	Action	Description of Change
06-Jan-2020	Version 18	Changed	Overview, Configuration Information and Technical Specifications sections were updated.
02-Dec-2019	Version 17	Changed	QuickSpecs was updated.
04-Nov-2019	Version 16	Changed	Standard Features and Configuration Information sections were updated.
		Added	SKUs added in Configuration Information section: R0W89A, R0Y98A, Q2N41A, R0W29A, R0Z45A, R1F97A
		Removed	Obsolete SKUs were deleted: Q2N68A, Q0V76A.
07-Oct-2019	Version 15	Changed	Standard Features and Configuration Information sections were updated.
05-Aug-2019	Version 14	Changed	Standard Features, Physical and Environmental Information, and Ordering and Configuration sections were updated.

		Added	SKUs added in Ordering and Configuration section: R3T68A, R0W82A, R0W83A.
		Removed	Obsolete SKU was deleted: Q0E21A
06-May-2019	Version 13	Changed	Overview, Standard Features and Ordering and configuration sections were updated
		Added	SKUS added in Ordering and Configuration section: R0X02A, R0X03A, R0X04A.
02-Apr-2019	Version 12	Changed	Overview, Standard Features, Physical and Environmental Information, and Technical Specifications sections were updated.
		Added	SKUs added in Ordering and Configuration section: Q2N05B, Q7G51B, Q2N06B, Q7G52B, Q6L89B, Q7G53B, R0X10A, R1C96A, R1C97A, R0X01A, R0X00A, R0W99A, R0W98A, R0W97A, R0W96A, R0W95A, R0W94A, R0W93A, R0W92A, R0W91A, R0W88A, R0W87A, R0W86A, R0W85A, R0W84A, R0W81A, R0W80A, R0W79A, R0X05A, R0X06A, R0X07A, R0X02A, R0X03A, R0X04A, R0Z00A, R0Z01A, R0Y99A, H7B70A, 817718-B21, 874253-B21, 867328-B21, Q9U36A, P10264-H21, P10266-H21, P10268-H21.
		Removed	SKUs were deleted: 877825-H21, 877827-H21, 877829-B21.
04-Feb-2019	Version 11	Changed	Standard Features, Physical and Environmental Information, and Ordering and Configuration sections were updated.
		Added	SKUs were added in Ordering and Configuration section: R2A72A, R2A73A, R2A74A, R2A69A, R2A70A, R2A71A, R2A65A, R2A66A, R2A67A, R2A68A.
		Removed	Skus were deleted in Ordering and Configuration section: Q2N43A, Q2N44A, Q6L95A, Q6L96A, Q6L97A, Q6L98A, Q6M07A, Q6M13A, Q6M14A.
05-Nov-2018	Version 10	Changed	Standard Features, Physical and Environmental Information, Ordering and Configuration, and Technical Specifications sections were updated.
01-Oct-2018	Version 9	Changed	Updates applied in QuickSpecs
06-Aug-2018	Version 8	Changed	Standard Features, Physical and Environmental Information, and Ordering and Configuration sections were updated.
		Added	SKUs added: M0S66A, Q6L93A, Q2N33A, Q0L12A, P9M76A, 878038-H21.
		Removed	SKUS deleted: Q6M00A, Q6M01A.
02-Jul-2018	Version 7	Changed	QuickSpecs was updated.

Date	Version History	Action	Description of Change
04-Jun-2018	Version 6	Changed	Overview, Standard Features, Physical and Environmental Information, Ordering and Configuration, and Technical specifications sections were updated.
		Added	SKUs added in Ordering and Configuration section: Q6L89A, Q7G53A, Q2N18A, Q2N19A, Q9Z03A, Q9Z04A, Q9Z05A, Q9Z06A, Q9Z07A, Q9Z08A, Q9Z09A, Q9V69A, Q9V70A, Q9V71A, Q9V72A, Q9V73A, Q9V74A, Q9V75A, Q9R86A, Q0V76A, Q6M16A, Q2N57A#001, Q2N57A#002, Q2N57A#003, Q2N57A#004, Q2N57A#005, Q2N57A#006, Q2N57A#007, Q2N57A#008, Q2N57A#009, Q2N57A#010, Q2N57A#011, Q2N57A#012, Q2N57A#013, Q2N57A#014, Q2N57A#015, Q2N57A#016, Q2N57A#017, Q2N57A#018, Q2N57A#019, Q2N57A#020, Q2N57A#021, Q2N57A#022, Q2N57A#023, Q2N57A#024, Q2N57A#025, Q2N57A#026, Q2N57A#027, Q2N57A#028, Q2N57A#101, Q2N57A#102, Q2N57A#103, Q2N57A#104, Q2N57A#105, Q2N57A#106, Q2N57A#107, Q2N57A#108, Q2N57A#109, Q2N57A#110, Q2N57A#111, Q2N57A#112, Q2N57A#113, Q2N57A#114, Q2N57A#115, Q2N57A#116, Q2N57A#117, Q2N57A#118, Q2N57A#119, Q2N57A#120, Q2N57A#121, Q2N57A#122, Q2N57A#123, Q2N57A#124, Q2N57A#125, Q2N57A#126, Q2N57A#127, Q2N57A#128.
02-Apr-2018	Version 5	Changed	Standard Features and Ordering and Configuration sections were updated.
		Added	SKUS added: 829335-B21, 872726-H21, Q6M17A, 817738-B21, 727055-B21, 647594-B21, Q0L14A, P9D94A, Q2N11A, Q6M15A.
05-Mar-2018	Version 4	Changed	Oracle Linux was added
		Removed	SKUs Q2N18A and Q2N19A were deleted.
05-Feb-2018	Version 3	Changed	Overview, Standard Features, Physical and Environmental Information, Ordering and Configuration, and Technical Specifications sections were updated.
		Added	SKUs added in Ordering and Configuration section: Q2N15A, Q2N16A, Q2N17A, Q2N18A, Q2N19A, Q2N20A, Q2N27A, Q2N28A, Q2N31A, Q6L92A, Q2N34A, Q9R29A, Q9R28A, Q2N35A, Q2N40A, 817738-B21, 829335-B21, 872726-H21, 877825-H21, 877827-H21, 877829-B21.
04-Dec-2017	Version 2	Changed	Overview, Standard Features, Physical and Environmental Information, Ordering and Configuration, and Technical Specifications sections were updated.
		Removed	SKU deleted in Ordering and Configuration section
06-Nov-2017	Version 1	Created	New QuickSpecs

Copyright

[Shape the Future of QuickSpecs - Your Input Matters](#)

[Chat now](#)

© Copyright 2025 Hewlett Packard Enterprise Development L.P. The information contained herein is subject to change without notice. The only warranties for Hewlett Packard Enterprise products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Hewlett Packard Enterprise shall not be liable for technical or editorial errors or omissions contained herein.

Hewlett Packard Enterprise makes no warranties for non-Hewlett Packard Enterprise products.
Intel and Xeon are US registered trademarks of Intel Corporation.

a00026242enw - 16062 - Worldwide - V43 - 15-December-2025
HEWLETT PACKARD ENTERPRISE
Hpe.com

